

Report on

GEN-2016-032 Modification Request Impact Study

Revision R1 I October 31, 2022

Submitted to Southwest Power Pool



anedenconsulting.com

TABLE OF CONTENTS

Revisi	on HistoryR-1			
Execut	Executive Summary ES-1			
1.0	Scope of Study1			
1.1	Power Flow Analysis1			
1.2	Stability Analysis, Short Circuit Analysis1			
1.3	Charging Current Compensation Analysis1			
1.4	Study Limitations1			
2.0	Project and Modification Request2			
3.0	Existing vs Modification Comparison			
3.1	POI Injection Comparison4			
3.2	Turbine Parameters Comparison4			
3.3	Equivalent Impedance Comparison Calculation4			
4.0	Charging Current Compensation Analysis5			
4.1	Methodology and Criteria5			
4.2	Results5			
5.0	Short Circuit Analysis			
5.1	Methodology7			
5.2	Results7			
6.0	Dynamic Stability Analysis			
6.1	Methodology and Criteria8			
6.2	Fault Definitions			
6.3	Results			
7.0	Modified Capacity Exceeds GIA Capacity16			
7.1	Results16			
8.0	Material Modification Determination17			
8.1	Results17			
9.0	Conclusions			



LIST OF TABLES

Table ES-1: GEN-2016-032 Existing Configuration	. ES-1
Fable ES-2: GEN-2016-032 Modification Request	. ES-1
Fable 2-1: GEN-2016-032 Existing Configuration	2
Гаble 2-2: GEN-2016-032 Modification Request	3
Fable 3-1: GEN-2016-032 POI Injection Comparison	4
Table 4-1: Shunt Reactor Size for Low Wind Study (Modification)	5
Fable 5-1: POI Short Circuit Results	7
Table 5-2: 21SP Short Circuit Results	7
Table 5-3: 28SP Short Circuit Results	7
Fable 6-1: Fault Definitions	9
Table 6-2: GEN-2016-032 Dynamic Stability Results	13

LIST OF FIGURES

Figure 2-1: GEN-2016-032 Single Line Diagram (Existing Configuration)	2
Figure 2-2: GEN-2016-032 Single Line Diagram (Modification Configuration)	3
Figure 4-1: GEN-2016-032 Single Line Diagram (Modification)	6
Figure 6-1: FLT9004-PO1 GEN-2016-032 Instability (21LL Modification Case)	15
Figure 6-2: FLT9004-PO1 GEN-2016-032 Response after Curtailed to 190 MW (21LL Modification Ca	se) 15

APPENDICES

APPENDIX A: GEN-2016-032 Generator Dynamic Model APPENDIX B: Short Circuit Results APPENDIX C: SPP Disturbance Performance Requirements APPENDIX D: Dynamic Stability Simulation Plots



Revision History

DATE OR VERSION NUMBER	AUTHOR	CHANGE DESCRIPTION
10/31/2022	Aneden Consulting	Initial Report Issued



Executive Summary

Aneden Consulting (Aneden) was retained by the Southwest Power Pool (SPP) to perform a Modification Request Impact Study (Study) for GEN-2016-032, an active Generation Interconnection Request (GIR) with a point of interconnection (POI) at the Crescent 138 kV Substation.

The GEN-2016-032 project interconnects in the Oklahoma Gas and Electric (OKGE) control area with a capacity of 200 MW as shown in Table ES-1 below. This Study has been requested to evaluate the modification of GEN-2016-032 to change the turbine configuration to 33 x Vestas V162 6.0 MW + 1 x Vestas V136 3.45 MW for a total capacity of 201.45 MW per Table ES-2 below. The requested generating capacity for GEN-2016-032 exceeds its Generator Interconnection Agreement (GIA) Interconnection Service amount, 200 MW, as listed in Appendix A of the GIA. As a result, the customer must ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA. In addition, the modification request included changes to the collection system, generator step-up transformers, generation interconnection line, and main substation transformers. GEN-2016-032 was previously modified in November 2019¹ as shown in Table ES-2.

Table ES-1: GEN-2016-032 Existing Configuration					
Request Point of Interconnection Existing Generator Intercon Configuration Ca					
GEN-2016-032	Crescent 138 kV (515377)	100 x Vestas V110 2.0 MW	200		

Facility	Existing Configuration ¹	Modification C	onfiguration
Point of Interconnection	Crescent 138 kV Substation (515377)	Crescent 138 kV Substation (515377)	
Configuration/Capacity	100 x Vestas V110 2.0 MW = 200 MW	33 x Vestas V162 6.0 MW + 1 x Vestas V136 3.45 MW = 201.45 MW POI limited to 200 MW	
Generation Interconnection Line	Length = 6 miles R = 0.003721 pu, X = 0.023919 pu B = 0.006482 pu Rating MVA = 217 MVA	POI limited to 200 MW Length = 6.96 miles R = 0.001813 pu, X = 0.021285 pu B = 0.009850 pu Rating MVA = 217 MVA	
Main Substation Transformer ²	X = 8.497%, R = 0.188%, Winding MVA = 150 MVA, Rating MVA = 250 MVA	X = 9.498%, R = 0.209%, Winding MVA = 134 MVA, Rating [A/B] MVA = 134/223.8 MVA	
Equivalent GSU Transformer ²	Gen 1 Equivalent Qty: 100 X = 9.759%, R = 0.895%, Winding MVA = 206 MVA, Rating MVA = 206 MVA	Gen 1 Equivalent Qty: 33 X = 10.299%, R = 0.9%, Winding MVA = 240.9 MVA, Rating MVA = 240.9 MVA	Gen 2 Equivalent Qty: 1 X = 8.999%, R = 0.8%, Winding MVA = 4.0 MVA, Rating MVA = 4.0 MVA
Equivalent Collector Line ³ R = 0.006427 pu, X = 0.010262 pu B = 0.177634 pu R = 0.0 X = 0.0 B = 0.0 Generator Dynamic Model ⁴ & Power Factor 100 x Vestas V110 2.0 MW (VWCOR6) ⁴ 33 x Ve (EV211 Leading and Lagging; ±1 0		R = 0.003199 pu X = 0.005391 pu B = 0.052923 pu	
		33 x Vestas V162 6.0 MW (EV211460000) ⁴ Leading: 0.949 Lagging: 0.914	1 x Vestas V136 3.45 MW (CP200660000) ⁴ Leading: 0.932 Lagging: 0.89

Table ES-2: GEN-2016-032 Modification Request

2) X/R based on Winding MVA, 3) All pu are on 100 MVA Base 4) DYR stability model name

¹ GEN-2016-032 November 2019 Modification Request Impact Study https://opsportal.spp.org/documents/studies/files/2016 Generation Studies/GEN-2016-032 SPP Report.pdf



SPP determined that power flow should not be performed based on the POI MW injection increase of 1.77% compared to the DISIS-2017-001 power flow models. However, SPP determined that while the modification used the same turbine manufacturer, Vestas, the change in stability model from VWCO81 to EV211460000 and CP200660000 required short circuit and dynamic stability analyses.

The scope of this modification request study included charging current compensation analysis, short circuit analysis, and dynamic stability analysis.

Aneden performed the analyses using the modification request data based on the DISIS 2017-001 study models:

- 1. 2019 Winter Peak (19WP),
- 2. 2021 Light Load (21LL),
- 3. 2021 Summer Peak (21SP),
- 4. 2028 Summer Peak (28SP)

All analyses were performed using the PTI PSS/E version 33 software and the results are summarized below.

The results of the charging current compensation analysis performed using the 2019 Winter Peak, 2021 Light Load, 2021 Summer Peak, and 2028 Summer Peak models showed that the GEN-2016-032 project needed 6.3 MVAr of reactor shunts on the 34.5 kV bus of the project substation with the modifications in place, a decrease from the 18.6 MVAr found for the GEN-2016-032 configuration in the previous modification study². This is necessary to offset the capacitive effect on the transmission network caused by the project's transmission line and collector system during low-wind or no-wind conditions. The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Owner and/or Transmission Operator.

The results from the short circuit analysis with the updated topology showed that the maximum GEN-2016-032 contribution to three-phase fault currents in the immediate transmission systems at or near the GEN-2016-032 POI was no greater than 1.01 kA for the 21SP and 28SP models. All three-phase fault current levels within 5 buses of the POI with the GEN-2016-032 generators online were below 45 kA for the 21SP and 28SP models. There were several buses with a maximum fault current of over 40 kA. These buses are highlighted in Appendix B.

The dynamic stability analysis was performed using PTI PSS/E version 33.10 software for the four modified study models: 2019 Winter Peak, 2021 Light Load, 2021 Summer Peak, and 2028 Summer Peak. 37 events were simulated, which included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground stuck breaker faults.

The results of the dynamic stability analysis showed that with a prior outage on the Crescent to Cottonwood 138 kV line followed by a three-phase fault on and loss of the Twin Lake to Dover 138 kV line (FLT9004-PO1) GEN-2016-032 became unstable and eventually tripped. GEN-2016-032 may have to be

² GEN-2016-032 Modification Request Impact Study, November 9, 2019



curtailed to about 190 MW after the prior outage of the Crescent to Cottonwood 138 kV or Twin Lake to Dover 138 kV, to remain stable following a subsequent fault.

There were no other damping or voltage recovery violations attributed to the GEN-2016-032 project observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

The requested modification has been determined by SPP to not be a Material Modification. The requested modification does not have a material adverse impact on the cost or timing of any other Interconnection Request with a later Queue priority date. As the requested modification places the generating capacity of the Interconnection Request at a higher amount than its Interconnection Service, the customer must install monitoring and control equipment as needed to ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA.

In accordance with FERC Order No. 827, the generating facility will be required to provide dynamic reactive power within the range of 0.95 leading to 0.95 lagging at the high-side of the generator substation.

It is likely that the customer may be required to reduce its generation output to 0 MW in real-time, also known as curtailment, under certain system conditions to allow system operators to maintain the reliability of the transmission network.

Nothing in this study should be construed as a guarantee of transmission service or delivery rights. If the customer wishes to obtain deliverability to final customers, a separate request for transmission service must be requested on Southwest Power Pool's OASIS by the customer.



1.0 Scope of Study

Aneden Consulting (Aneden) was retained by the Southwest Power Pool (SPP) to perform a Modification Request Impact Study (Study) for GEN-2016-032. A Modification Request Impact Study is a generation interconnection study performed to evaluate the impacts of modifying the DISIS study assumptions. The determination of the required scope of the study is dependent upon the specific modification requested and how it may impact the results of the DISIS study. Impacting the DISIS results could potentially affect the cost or timing of any Interconnection Request with a later Queue priority date, deeming the requested modification a Material Modification. The criteria sections below include reasoning as to why an analysis was either included or excluded from the scope of study.

All analyses were performed using the PTI PSS/E version 33 software. The results of each analysis are presented in the following sections.

1.1 Power Flow Analysis

To determine whether power flow analysis is required, SPP evaluates the difference in the real power output at the POI between the DISIS-2017-001 power flow configuration and the requested modification. Power flow analysis is performed if the difference in the real power may result in a significant impact on the results of the DISIS power flow analysis.

1.2 Stability Analysis, Short Circuit Analysis

To determine whether stability and short circuit analyses are required, SPP evaluates the difference between the turbine parameters and, if needed, the collector system impedance between the existing configuration and the requested modification. Dynamic stability analysis and short circuit analysis would be required if the differences listed above were determined to have a significant impact on the most recently performed DISIS stability analysis.

1.3 Charging Current Compensation Analysis

SPP requires that a charging current compensation analysis be performed on the requested modification configuration as it is a non-synchronous resource. The charging current compensation analysis determines the capacitive effect at the POI caused by the project's collector system and transmission line's capacitance. A shunt reactor size is determined in order to offset the capacitive effect and maintain zero (0) MVAr flow at the POI while the project's generators and capacitors are offline.

1.4 Study Limitations

The assessments and conclusions provided in this report are based on assumptions and information provided to Aneden by others. While the assumptions and information provided may be appropriate for the purposes of this report, Aneden does not guarantee that those conditions assumed will occur. In addition, Aneden did not independently verify the accuracy or completeness of the information provided. As such, the conclusions and results presented in this report may vary depending on the extent to which actual future conditions differ from the assumptions made or information used herein.




2.0 Project and Modification Request

The GEN-2016-032 Interconnection Customer has requested a modification to its Interconnection Request (IR) with a point of interconnection (POI) at Crescent 138 kV Substation.

At the time of the posting of this report, GEN-2016-032 is an active Interconnection Request with a queue status of "IA FULLY EXECUTED/ON SCHEDULE." GEN-2016-032 is a wind farm with maximum summer and winter queue capacity of 200 MW with Energy Resource Interconnection Service (ERIS) and Network Resource Interconnection Service (NRIS) requests.

The GEN-2016-032 project is currently in the DISIS-2016-001 cluster. Table 2-1 shows the power flow model single line diagram for GEN-2016-032 which was previously modified in November 2019³. The GEN-2016-032 project interconnects in the Oklahoma Gas and Electric (OKGE) control area with a capacity of 200 MW as shown in Table 2-1 below.

Table 2-1: GEN-2016-032 Existing Configuration					
Request	Interconnection Queue Capacity (MW)				
GEN-2016-032	Crescent 138 kV (515377)	100 x Vestas V110 2.0 MW	200		

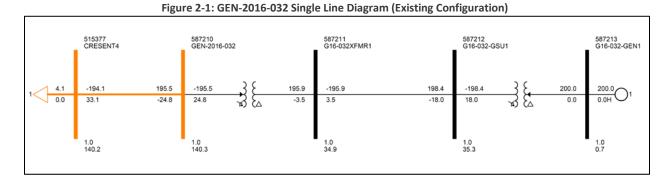


This Study has been requested by the Interconnection Customer to evaluate the modification of GEN-2016-032 to a turbine configuration of 33 x Vestas V162 6.0 MW + 1 x Vestas V136 3.45 MW for a total capacity of 201.45 MW. The combined generating capacity for GEN-2016-032 (201.45 MW) exceeds the total Generator Interconnection Agreement (GIA) Interconnection Service amount, (200 MW), as listed in Appendix A of the GIA. As a result, the customer must ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA. In addition, the modification request included changes to the collection system, generator step-up transformers, generation interconnection line, and main substation transformers. Figure 2-2 shows the power flow model single line diagram for this GEN-2016-032 modification request. The existing and modified configurations for GEN-2016-032 are shown in Table 2-2.

https://opsportal.spp.org/documents/studies/files/2016_Generation_Studies/GEN-2016-032_SPP_Report.pdf



³ GEN-2016-032 Modification Request Impact Study, November 9, 2019

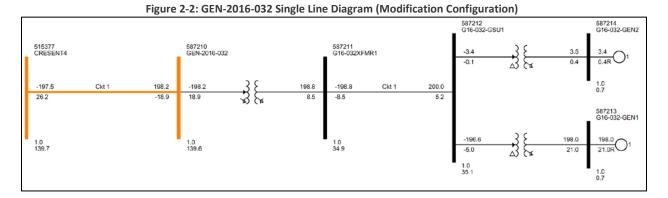

Facility	Existing Configuration	Modification (Configuration	
Point of Interconnection	Crescent 138 kV Substation (515377)	Crescent 138 kV Substation (515377)		
Configuration/Capacity	100 x Vestas V110 2.0 MW = 200 MW	33 x Vestas V162 6.0 MW + 1 x Vestas V136 3.45 MW = 201.45 MW POI limited to 200 MW		
Generation Interconnection Line	Length = 6 miles R = 0.003721 pu X = 0.023919 pu B = 0.006482 pu Rating MVA = 217 MVA	Length = 6.96 miles R = 0.001813 pu X = 0.021285 pu B = 0.009850 pu Rating MVA = 217 MVA		
Main Substation Transformer ¹	X = 8.497%, R = 0.188%, Winding MVA = 150 MVA, Rating MVA = 250 MVA	IVA, Winding MVA = 134 MVA,		
Equivalent GSU Transformer ¹	Gen 1 Equivalent Qty: 100 X = 9.759%, R = 0.895%, Winding MVA = 206 MVA, Rating MVA = 206 MVA	Gen 1 Equivalent Qty: 33 X = 10.299%, R = 0.9%, Winding MVA = 240.9 MVA, Rating MVA = 240.9 MVA	Gen 2 Equivalent Qty: 1 X = 8.999% , R = 0.8% , Winding MVA = 4.0 MVA, Rating MVA = 4.0 MVA	
Equivalent Collector Line ² R = 0.006427 pu X = 0.010262 pu B = 0.177634 pu		R = 0.003199 pu X = 0.005391 pu B = 0.052923 pu		
Generator Dynamic Model ³ & Power Factor	100 x Vestas V110 2.0 MW (VWCOR6) ³ Leading and Lagging: ±1.0	33 x Vestas V162 6.0 MW (EV211460000) ³ Leading: 0.949 Lagging: 0.914	1 x Vestas V136 3.45 MW (CP200660000) ³ Leading: 0.932 Lagging: 0.89	

Table 2-2: GEN-2016-032 Modification Request

1) X/R based on Winding MVA, 2) All pu are on 100 MVA Base 3) DYR stability model name



3.0 Existing vs Modification Comparison

To determine which analyses are required for the Study, the differences between the existing configuration and the requested modification were evaluated. Aneden performed this comparison and the resulting analyses using a set of modified study models developed based on the modification request data and the DISIS-2017-001 study models.

The methodology and results of the comparisons are described below. The analysis was completed using PSS/E version 33 software.

3.1 POI Injection Comparison

The real power injection at the POI was determined using PSS/E to compare the DISIS-2017-001 power flow configuration and the requested modifications for GEN-2016-032. The percentage change in the POI injection was then evaluated. If the MW difference was determined to be significant, power flow analysis would be performed to assess the impact of the modification request.

SPP determined that power flow analysis was not required due to the insignificant change (increase of 1.77%) in the real power output at the POI between the studied DISIS-2017-001 power flow configuration and requested modification shown in Table 3-1.

Table 3-1: GEN-2016-032 POI Injection Comparison

Interconnection Request	DISIS-2017-001 POI	MRIS POI Injection	POI Injection
	Injection (MW)	(MW)	Difference %
GEN-2016-032	194.1	197.5	1.77%

3.2 Turbine Parameters Comparison

SPP determined that while the modification used the same turbine manufacturer, Vestas, the change in stability model from VWCO81 to EV211460000 and CP200660000 required short circuit and dynamic stability analysis. This is because the short circuit contribution and stability responses of the existing configuration and the requested modification's configuration may differ. The generator dynamic model for the modification can be found in Appendix A.

As short circuit and dynamic stability analyses were required, a turbine parameters comparison was not needed for the determination of the scope of the study.

3.3 Equivalent Impedance Comparison Calculation

As the turbine stability model change determined that short circuit and dynamic stability analyses were required, an equivalent impedance comparison was not needed for the determination of the scope of the study.



4.0 Charging Current Compensation Analysis

The charging current compensation analysis was performed for GEN-2016-032 to determine the capacitive charging effects during reduced generation conditions (unsuitable wind speeds, unsuitable solar irradiance, insufficient state of charge, idle conditions, curtailment, etc.) at the generation site and to size shunt reactors that would reduce the project reactive power contribution to the POI to approximately zero.

4.1 Methodology and Criteria

The GEN-2016-032 generators were switched out of service while other collection system elements remained in-service. A shunt reactor was tested at the project's collection substation 34.5 kV bus to set the MVAr flow into the POI to approximately zero. The size of the shunt reactor is equivalent to the charging current value at unity voltage and the compensation provided is proportional to the voltage effects on the charging current (i.e., for voltages above unity, reactive compensation is greater than the size of the reactor).

Aneden performed the charging current compensation analysis using the modification request data based on the DISIS 2017-001 stability study models:

- 1. 2019 Winter Peak (19WP),
- 2. 2021 Light Load (21LL),
- 3. 2021 Summer Peak (21SP),
- 4. 2028 Summer Peak (28SP)

4.2 Results

The results from the analysis showed that the GEN-2016-032 project needed approximately 6.3 MVAr of compensation at its project substation, to reduce the POI MVAr to zero. This is a decrease from the 18.6 MVAr found for the GEN-2016-032 configuration in the previous modification study⁴. Figure 4-1 illustrates the shunt reactor size needed to reduce the POI MVAr to approximately zero with the updated topology. The final shunt reactor requirements for GEN-2016-032 are shown in Table 4-1.

The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Operator. The applicable reactive power requirements will be further reviewed by the Transmission Owner and/or Transmission Operator.

Machine	POI Bus Number			Reactor	Size (MVA	vr)
Wachine	POI Bus Number		19WP	21LL	21SP	28SP
GEN-2016-032	515377	CRESENT4 138 kV	6.3	6.3	6.3	6.3

 Table 4-1: Shunt Reactor Size for Low Wind Study (Modification)

https://opsportal.spp.org/documents/studies/files/2016_Generation_Studies/GEN-2016-032_SPP_Report.pdf



⁴ GEN-2016-032 Modification Request Impact Study, November 9, 2019

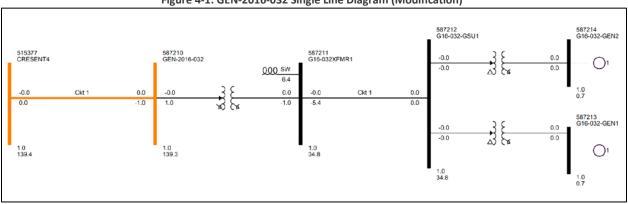


Figure 4-1: GEN-2016-032 Single Line Diagram (Modification)

5.0 Short Circuit Analysis

A short circuit study was performed using the 21SP and 28SP models for GEN-2016-032. The detailed results of the short circuit analysis are provided in Appendix B.

5.1 Methodology

The short circuit analysis included applying a 3-phase fault on buses up to 5 levels away from the 138 kV POI bus. The PSS/E "Automatic Sequence Fault Calculation (ASCC)" fault analysis module was used to calculate the fault current levels in the transmission system with and without GEN-2016-032 online.

Aneden performed the short circuit analysis using the modification request data based on the DISIS 2017-001 stability study models:

- 1. 2021 Summer Peak (21SP),
- 2. 2028 Summer Peak (28SP)

5.2 Results

The results of the short circuit analysis for the 21SP and 28SP models are summarized in Table 5-1 through Table 5-3 respectively. The GEN-2016-032 POI bus (Crescent 138 kV - 515377) fault current magnitudes are provided in Table 5-1 showing a maximum fault current of 9.17 kA with the GEN-2016-032 project online.

The maximum fault current calculated within 5 buses of the GEN-2016-032 POI was less than 45 kA for the 21SP and 28SP models respectively. There were several buses with a maximum fault current of over 40 kA. These buses are highlighted in Appendix B. The maximum GEN-2016-032 contribution to three-phase fault current was about 12.4% and 1.01 kA.

Table 5-1: POI Short Circuit Results					
Case	GEN-OFF Current (kA)	GEN-ON Current (kA)	Max kA Change	Max %Change	
21SP	8.16	9.17	1.01	12.4%	
28SP	8.16	9.17	1.01	12.4%	

Table 5-2. 215P Short Circuit Results					
Voltage (kV)	Max. Current (kA)	Max kA Change	Max %Change		
69	11.9	0.05	0.7%		
138	44.9	1.01	12.4%		
345	34.5	0.05	0.2%		
Max	44.9	1.01	12.4%		

Table 5-2: 21SP Short Circuit Results

Table 5-3: 28SP Short Circuit Results

Voltage (kV)	Max. Current (kA)	Max kA Change	Max %Change		
69	11.9	0.05	0.7%		
138	44.9	1.01	12.4%		
345	34.5	0.05	0.2%		
Max	44.9	1.01	12.4%		



6.0 Dynamic Stability Analysis

Aneden performed a dynamic stability analysis to identify the impact of the turbine configuration change and other modifications to the GEN-2016-032 project. The analysis was performed according to SPP's Disturbance Performance Requirements shown in Appendix C. The modification details are described in Section 2.0 above and the dynamic modeling data is provided in Appendix A. The simulation plots can be found in Appendix D.

6.1 Methodology and Criteria

The dynamic stability analysis was performed using models developed with the requested GEN-2016-032 configuration of 33 x Vestas V162 6.0 MW (EV211460000) + 1 x Vestas V136 3.45 MW (CP200660000). This stability analysis was performed using PTI's PSS/E version 33.10 software.

The modifications requested for the GEN-2016-032 project were used to create modified stability models for this impact study based on the DISIS 2017-001 stability study models:

- 1. 2019 Winter Peak (19WP),
- 2. 2021 Light Load (21LL),
- 3. 2021 Summer Peak (21SP),
- 4. 2028 Summer Peak (28SP)

The following system adjustment was made to address existing base case issues that are not attributed to the modification request:

1. The capacitor bank at bus 588046 was set to 500 MVAr in the 28SP case to avoid steady state low voltage issues.

The modified dynamics model data for the GEN-2016-032 project is provided in Appendix A. The modified power flow models and associated dynamics database were initialized (no-fault test) to confirm that there were no errors in the initial conditions of the system and the dynamic data.

During the fault simulations, the active power (PELEC), reactive power (QELEC), and terminal voltage (ETERM) were monitored for GEN-2016-032 and other equally and prior queued projects in their cluster group⁵. In addition, voltages of five (5) buses away from the POI of GEN-2016-032 were monitored and plotted. The machine rotor angle for synchronous machines and speed for asynchronous machines within the study areas including 520 (AEPW), 524 (OKGE), 525 (WFEC), 526 (SPS), 531 (MIDW), 534 (SUNC), 536 (WERE) 540 (GMO), and 541 (KCPL) were monitored. In addition, the voltages of all 100 kV and above buses within the study areas were monitored.

6.2 Fault Definitions

Aneden simulated the faults previously simulated for GEN-2016-032 and developed additional fault events as required. The new set of faults were simulated using the modified study models. The fault events included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground stuck breaker faults. The simulated faults are listed and described in Table 6-1 below. These

⁵ Based on the DISIS-2017-001 Cluster Groups



contingencies were applied to the modified 2019 Winter Peak, 2021 Light Load, 2021 Summer Peak, and the 2028 Summer Peak models.

E. JUB	Planning	Table 6-1: Fault Definitions
Fault ID	Event	Fault Descriptions
		3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 1, near ARCADIA. a. Apply fault at the ARCADIA 345 kV bus.
FLT49-3PH	P1	b. Clear fault after 6 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1, nea CRESENT4. a. Apply fault at the CRESENT4 138 kV bus.
FLT9001-3PH	P1	b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1, near CRESENT4.
FLT9002-3PH	P1	 a. Apply fault at the CRESENT4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4.
FLT9003-3PH	P1	a. Apply fault at the TWNLAKE4 138 kV bus.
1 213003 3111		b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near
		TWNLAKE4.
FLT9004-3PH	P1	a. Apply fault at the TWNLAKE4 138 kV bus.b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the TWNLKJT4 (520847) to CMBLTP 4 (520474) 138 kV line CKT 1, near TWNLKJT4.
	P1	a. Apply fault at the TWNLKJT4 138 kV bus.
FLT9005-3PH	PI	b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		 d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 3 phase fault on the TWNLKJT4 (520847) to CASHION4 (520479) 138 kV line CKT 1, near
		TWNLKJT4.
FLT9006-3PH	P1	 a. Apply fault at the TWNLKJT4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the DOVER 4 (520879) to DOVERSW4 (520882) 138 kV line CKT 1, near DOVER 4.
FLT9007-3PH	P1	a. Apply fault at the DOVER 4 138 kV bus.
FL19007-SFIT	FI	b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.
		3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near
		CTNWOOD4.
FLT9008-3PH	P1	a. Apply fault at the CTNWOOD4 138 kV bus.
		b. Clear fault after 7 cycles by tripping the faulted line.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault.
		3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4.
		a. Apply fault at the CTNWOOD4 138 kV bus.
FLT9009-3PH	P1	b. Clear fault after 7 cycles by tripping the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.

		Table 6-1 Continued							
Fault ID	Planning Event	Fault Descriptions							
	Event	3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4.							
FLT9010-3PH	P1	a. Apply fault at the CTNWOOD4 138 kV bus.b. Clear fault after 7 cycles by tripping the faulted line.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.							
FLT9011-3PH	P1	 3 phase fault on the LBRTYLK4 (515373) to WATRLOO4 (514831) 138 kV line CKT 1, near LBRTYLK4. a. Apply fault at the LBRTYLK4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9012-3PH	P1	 3 phase fault on the MARSHL4 (514733) to WOODRNG4 (514714) 138 kV line CKT 1, near MARSHL4. a. Apply fault at the MARSHL4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9013-3PH	P1	 3 phase fault on the MARSHL4 (514733) to MARSHAL4 (521006) 138 kV line CKT 1, near MARSHL4. a. Apply fault at the MARSHL4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9014-3PH	P1	 3 phase fault on the PINE ST4 (514829) to FITZGRD4 (514830) 138 kV line CKT 1, near PINE ST4. a. Apply fault at the PINE ST4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9015-3PH	P1	 3 phase fault on the CTNWOOD4 (514827) to ARCADIA4 (514907) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9016-3PH	P1	 3 phase fault on the ARCADIA4 (514907) to LGARBER4 (515465) 138 kV line CKT 1, near ARCADIA4. a. Apply fault at the ARCADIA4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9017-3PH	P1	 3 phase fault on the ARCADIA4 (514907) to RNDBARN4 (515461) 138 kV line CKT 1, near ARCADIA4. a. Apply fault at the ARCADIA4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9018-3PH	P1	 3 phase fault on the ARCADIA4 (514907) to JNSKAMO4 (514906) 138 kV line CKT 1, near ARCADIA4. a. Apply fault at the ARCADIA4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 							
FLT9019-3PH	P1	3 phase fault on the ARCADIA3 138 kV (514907) / 345 kV (514908)/ 13.8 kV (515704) XFMR CKT 1, near ARCADIA4 138 kV. a. Apply fault at the ARCADIA4 138 kV bus. b. Clear fault after 7 cycles and trip the faulted transformer.							
FLT9020-3PH	P1	 3 phase fault on the ARCADIA7 (514908) to SEMINOL7 (515045) 345 kV line CKT 1, near ARCADIA7. a. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 							

Path ID Event Path Descriptions FLT3021-3PH P1 3 phase fault on the ARCADIA7 (514909) to INORTWST7 (514880) 345 kV line CKT 1, near ARCADIA7. FLT3021-3PH P1 a. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. g. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Lawer fault on the ARCADIA 345 kV bus. b. Clear fault after 6 cycles.W1 (51307) to CTWWODO (514909) 345 kV line CKT 1; near ARCADIA. a. Apply fault at the ARCADIA 345 kV bus.<			Table 6-1 Continued						
FLT3021-3PH P1 A. Apply fault at the ARCADIAT 345 kV bus. FLT3021-3PH P1 A. Apply fault at the ARCADIAT 345 kV bus. FLT3022-3PH P1 A. Apply fault at the ARCADIAT 345 kV bus. FLT3022-3PH P1 A. Apply fault at the ARCADIAT 345 kV bus. Gear fault and ref cycles by tripping the faulted line. (Wait 20 cycles, and then re-close the line in (b) back into the fault. Gear fault after 6 cycles by tripping the faulted line. Wait 20 cycles, and then re-close the line in (b) back into the fault. Gear fault after 6 cycles by tripping the faulted line. Wait 20 cycles, and then re-close the line in (b) back into the fault. Gear fault after 6 cycles by tripping the faulted line. Cycles, and then re-close the line in (b) back into the fault. Gear fault after 6 cycles, then trip the line in (b) back into the fault. Lazeve fault on the ARCADIA (514090) to REDBUD 7 (514090) 345 kV line CKT 1; near FLT3024-3PH P1 B. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. (b) and remove fault. ghase fault on the ARCADIA 345 kV bus. Cyc	Fault ID	Planning Event	Fault Descriptions						
FL19021-3PH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wai 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the 76 cycles, sthen trip the line in (b) and remove fault. FL19022-3PH P1 b. Clear fault after 6 cycles, sthen trip the line in (b) and remove fault. a. Apply fault at the ARCADIA7 345 KV bus. b. Clear fault after 6 cycles, sthen trip the line in (b) and remove fault. a. Apply fault at the ARCADIA 345 KV bus. b. Clear fault after 6 cycles, sthen trip the line in (b) and remove fault. a. Apply fault at the ARCADIA 345 KV bus. b. Clear fault after 6 cycles, sthen trip the line in (b) and remove fault. a. Apply fault at the ARCADIA 345 KV bus. b. Clear fault after 6 cycles, sthen trip the line in (b) and remove fault. c. Wai 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on to 6 cycles, sthen trip the line in (b) and remove fault. fL19024-3PH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wai 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. fL19024-3PH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wai 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.			ARCADIA7.						
e. Wai 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 3 phase fault on the ARCADIA7 (514908) to G16-100-TAP (587804) 345 kV line CKT 1, near ARCADIA7. a. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wai 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 3 phase fault on the ARCADIA 345 kV bus. b. Clear fault after 6 cycles then trip the line in (b) and remove fault. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles, then trip the line in (b) and remove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles, then trip the menove fault. c. Leave fault on for 6 cycles. (the trip the menove fault. c. Leave fault on for 7 cycles, then trip the menove fault. c. Leave fault on for 7 cycles, t	FLT9021-3PH	P1							
FLT9022-3PH P1 3 phase fault on the ARCADIA7 (514908) to G16-100-TAP (587804) 345 kV line CKT 1, near ARCADIA7. a. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. b. Clear fault on for 6 cycles, then rip the line in (h) and remove fault. J. Laws fault on for 6 cycles, then rip the line in (h) and remove fault. FLT9023-3PH P1 a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault on for 6 cycles, then rip the line in (h) and remove fault. J. Laws fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. J. Dask fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. J. Dask fault on the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Laws fault on tor 6 cycles. then trip the line in (b) back into the fault. fLT9024-3PH P1 a. Apply fault at the TWNLAKE4 (521073) to TWNLAUT4 (520847) 138 kV line CKT 1; near TWNLAKE4. fL19003-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to TWNLAUT4 (520847) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to TWNLAUT4 (520847) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (5210									
FLT9022-3PH P1 a. Apply fault at the ARCADIA7 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. FLT9024-3PH P1 a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles the trip the line in (b) and remove fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. FLT9024-3PH P1 a. Apply fault at the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. d. Leave fault on for Cycles, then trip the line in (b) and remove fault. FLT9024-3PH P1 a. Apply fault at the ARCADIA (515077) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (515077) to TWWLKJT4 (520877) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (515073) to DTWNLKJT4 (520877) 138 kV line CKT 1; 3 phase fault on the 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the f									
FLT9022-3PH P1 a. Apply fault at the ARCADIA 7345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. FLT9023-3PH P1 a. Apply fault at the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. FLT9023-3PH P1 a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault after 7 cycles, then trip the line in (b) back into the fault. d. Leave fault after 7 cycles, then trip the line in (b) back into the fault. d. Leave fault after 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault after 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 (521073) to DVVER 4 (52073) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DVVER 4 (52073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRT									
B. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the ARCADIA (51408) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA. a. Apply fault at the ARCADIA (51408) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA. a. Apply fault at the ARCADIA (51408) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on tor 6 cycles, then trip the line in (b) back into the fault. d. Leave fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 6 cycles by tripping the faulted line. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 (521073) to TWNLAT4 (520847) 138 kV line CKT 1; and TWNLAKE4. 3 phase fault on the TWNLAKE4 (521073) to TWNLAT4 (520847) 138 kV line CKT 1; and TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; aphase fault on the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; aphase fault an the TO cycles, then trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault for T cycles by trippi		D1							
ed. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA. a. Apply fault at the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) on an ermove fault. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) on an ermove fault. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 (51073) to CTNWOOD4 (514827) 138 kV line CKT 1; as phase fault on the TWNLAKE4 (51073) to TWNOD4 (514827) 138 kV line CKT 1, near TWNLAKE4. FLT9004-PO1 P6 PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; as phase fault on the TWNLAKE4 (521073) to DVER 4 (521073) 138 kV line CKT 1; as phase fault on the TWNLAKE4 (521073) to DVER 4 (521073) 138 kV line CKT 1; as phase fault on the Croycles, then trip th	1 213022-3111								
FLT9023-3PH P1 3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 2, near ARCADIA, a Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. FLT9024-3PH P1 A RCADIA, 614090 to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. a. Apply fault at the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. A RCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. b. Clear fault after 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on the ARCADIA (5149073) to TWNLKJT4 (520847) 138 kV line CKT 1; 3 phase fault on the TKNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. FLT9003-P01 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on the TVNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; 3 phase fault on the TCNLAKE4 (53177) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1									
FLT9023-3PH P1 a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault farts 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 3 phases fault on the ARCADIA (345 kV bus. FLT9024-3PH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to TUNUCUT4 (52047) 138 kV line CKT 1; near TWNLAKE4. a Apply fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. e. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. e. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. fLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (51377) to			3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 2, near						
FL19023-3PH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to TWNWOD4 (514427) 138 kV line CKT 1; a phase fault on for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 (521073) to DWNLAKE4 (521073) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (515377) to DWNLAKE4 (521073) 138 kV line CKT 1; a sphase f		5.4							
el. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. 3 phase fault on the ARCADIA (51908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. d. Leave fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a phase fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to TWNUCD4 (514827) 138 kV line CKT 1; a sphase fault on for 7 cycles, then trip the line in (b) and remove fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNUCD4 (514827) 138 kV line CKT 1; a sphase fault on the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; a sphase fault on the 7 cycles by tripping the faulted line. fLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. fLT9004-PO1 P6	FL19023-3PH	P1	b. Clear fault after 6 cycles by tripping the faulted line.						
FLT9024-3PH P1 3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near ARCADIA. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. FLT9003-P01 P6 P6 a. Apply fault at the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a) phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1; a) phase fault on for 7 cycles, then trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. fLT9004-P01 P6 P6 A. Apply fault at the TWNLAKE4 (521073) to DVWED4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. FLT9004-P01 P6 A. Apply fault at the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; 3 phase fault on the CT 2 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault after 7 cycles by tripping the faulted line. FLT									
FLT9024-3PH P1 ARCADIA. a. Apply fault at the ARCADIA 345 kV bus. b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) back into the fault. result PRIOR OUTAGE of CRESENT4 (615377) to CTMWOOD4 (614827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to TWNUKJT4 (520847) 138 kV line CKT 1; a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			3 phase fault on the ARCADIA (514908) to REDBUD 7 (514909) 345 kV line CKT 3, near						
PL19024-SPH P1 b. Clear fault after 6 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. PRIOR OUTACE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9004-P01 P6 a. Apply fault at the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (521073) to DVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4. FLT9004-P01 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; a phase fault on the 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back intot the fault. d. Leave fault on the 7 c			ARCADIA.						
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1; near TWNLAKE4. a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; near CTNWOOD4. fltgoot-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to LBRTYLK4 (5121073) 138 kV line CKT 1; near CTNWOOD4. ghase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; near CTNWOOD4.	FLT9024-3PH	P1							
etc. d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9004-PO1 P6 PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4									
FLT9003-PO1 P6 3 phase fault on the TWNLAKE4 (521073) to TWNLKJT4 (520847) 138 kV line CKT 1, near TWNLAKE4. FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. cleave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (615377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to DOVER 4 (52073) 138 kV line CKT 1, near TWNLAKE4. FLT9008-PO2 P6 a. Apply fault at the TWNLAKE4 (51377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; near CTNWOOD4. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. fLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. fLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. <td></td> <td></td> <td>d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault.</td>			d. Leave fault on for 6 cycles, then trip the line in (b) and remove fault.						
FLT9003-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. d. Leave fault on the TWNLAKE4 (521073) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; a phase fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (514733) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (514733) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (514733) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (514733) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; a phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT									
FLT9004-PO1 P6 b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1; a phase fault on the TWNLAKE4 (321073) to DOVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4. a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; a phase fault on for 7 cycles, then trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1;									
FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (51377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1; near TWNLAKE4. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 (51377) to CTNWOOD4 (514827) 138 kV line CKT 1; near TWNLAKE4. FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles, then trip the line in (b) and remove fault. c. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV	FLT9003-PO1	P6							
ed. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to CTNWOOD4 (514827) 138 kV line CKT 1; 3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4. a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault on the TWNLAKE4 138 kV bus. b. Clear fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back with the CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 138 kV bus. b. Clear fault at the CTNWOOD4 138 kV bus. b. Clear fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back with the CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) back with the CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) back with the CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 138 kV bus. b. Clear fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back withe t									
FLT9004-PO1P63 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near TWNLAKE4.FLT9004-PO1P6a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9008-PO2P6a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9008-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 (514827) to MARSHL4 (51473) 138 kV line CKT 1; 3 phase fault on the CTWOOD4 (514827) to MARSHL4 (51473) 138 kV line CKT 1; a phase fault on for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4									
FLT9004-PO1 P6 a. Apply fault at the TWNLAKE4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4. FLT9008-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1; near CTNWOOD4. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 (514827) to MARSHL4 (51473) 138 kV line CKT 1; 3 phase fault on the T 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the lin			3 phase fault on the TWNLAKE4 (521073) to DOVER 4 (520879) 138 kV line CKT 1, near						
b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4. FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-closes the line in (b) back into the fault. d. Leave fault on the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-closes the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377	FLT9004-PO1	P6							
d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9008-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4.FLT9008-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles, then trip the line in (b) back into the fault. (Leave fault on the CTNWOOD4 138 kV bus.FLT9009-PO2P6P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles, then trip the line in (b) back into the fault. (Leave fault on for 7 cycles, then trip the line in (b) back into the fault. (Leave fault on for 7 cycles, then trip the line in (b) back into the fault.FLT9010-PO2P6P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by			b. Clear fault after 7 cycles by tripping the faulted line.						
FLT9008-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4.FLT9008-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault.FLT9009-PO2P6P6P6PFUPP6Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9010-PO2P6P6Apply fault at the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4.FLT9010-PO2P6Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.									
FLT9008-PO2P63 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to TWNLAKE4 (521073) 138 kV line CKT 1, near CTNWOOD4.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.									
FLT9008-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. TWWOOD4.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles, then trip the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			3 phase fault on the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1, near						
ELTOOD-PO2P6b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9009-PO2P6P6a. Apply fault at the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.		P6							
C. Wait 20 cycles, and then re-close the line in (b) back into the fault.d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault.PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4.FLT9009-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.FLT9010-PO2P6PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on for 7 cycles, then trip the line in (b) and remove fault.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then cTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4.FLT9010-PO2P6a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1 213000-1 02	10							
FLT9009-PO2 P6 PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. TNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			c. Wait 20 cycles, and then re-close the line in (b) back into the fault.						
FLT9009-PO2 P6 3 phase fault on the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. FLT9010-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. TNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.									
FLT9009-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. FLT9010-PO2 P6 PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. FLT9010-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.									
b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.		Do							
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FL19009-PO2	P6							
FLT9010-PO2 P6 PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			c. Wait 20 cycles, and then re-close the line in (b) back into the fault.						
FLT9010-PO2P63 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.									
FLT9010-PO2 P6 a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			3 phase fault on the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1, near						
c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FLT9010-PO2	P6	a. Apply fault at the CTNWOOD4 138 kV bus.						
			d. Leave fault on for 7 cycles, then trip the line in (b) back into the fault.						



Table 6-1 Continued								
Fault ID	Planning Event	Fault Descriptions						
FLT9015-PO2	P6	 PRIOR OUTAGE of CRESENT4 (515377) to TWNLAKE4 (521073) 138 kV line CKT 1; 3 phase fault on the CTNWOOD4 (514827) to ARCADIA4 (514907) 138 kV line CKT 1, near CTNWOOD4. a. Apply fault at the CTNWOOD4 138 kV bus. b. Clear fault after 7 cycles by tripping the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 7 cycles, then trip the line in (b) and remove fault. 						
FLT1001-SB	P4	Stuck Breaker on CTNWOOD4 (514827) 138kV bus. a. Apply single-phase fault at CTNWOOD4 (514827) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1. d. Trip the CTNWOOD4 (514827) to ARCADIA4 (514907) 138 kV line CKT 1.						
FLT1002-SB	P4	Stuck Breaker on CTNWOOD4 (514827) 138kV bus. a. Apply single-phase fault at CTNWOOD4 (514827) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1. d. Trip the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1.						
FLT1003-SB	P4	Stuck Breaker on CTNWOOD4 (514827) 138kV bus. a. Apply single-phase fault at CTNWOOD4 (514827) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the CTNWOOD4 (514827) to LBRTYLK4 (515373) 138 kV line CKT 1. d. Trip the CTNWOOD4 (514827) to CRESENT4 (515377) 138 kV line CKT 1.						
FLT1004-SB	P4	Stuck Breaker on CTNWOOD4 (514827) 138kV bus. a. Apply single-phase fault at CTNWOOD4 (514827) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the CTNWOOD4 (514827) to CRESENT4 (515377) 138 kV line CKT 1. d. Trip the CTNWOOD4 (514827) to MARSHL4 (514733) 138 kV line CKT 1.						
FLT1005-SB	P4	Stuck Breaker on CTNWOOD4 (514827) 138kV bus. a. Apply single-phase fault at CTNWOOD4 (514827) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the CTNWOOD4 (514827) to ARCADIA4 (514907) 138 kV line CKT 1. d. Trip the CTNWOOD4 (514827) to PINE ST4 (514829) 138 kV line CKT 1.						
FLT1006-SB	P4	Stuck Breaker on TWNLAKE4 (521073) 138kV bus. a. Apply single-phase fault at TWNLAKE4 (521073) on the 138kV bus. b. Wait 16 cycles and remove fault. c. Trip the Bus TWNLAKE4 (521073).						

6.3 Results

Table 6-2 shows the results of the fault events simulated for each of the four modified cases. The associated stability plots are provided in Appendix D.

				Table 6-2	2: GEN-2016-	032 Dynam	ic Stability F	Results					
	19WP				21LL			21SP		28SP			
Fault ID	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable	
FLT49- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9001- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9002- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9003- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9004- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9005- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9006- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9007- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9008- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9009- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9010- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9011- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9012- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9013- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9014- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9015- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9016- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9017- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9018- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9019- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9020- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9021- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9022- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9023- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9024- 3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9003- PO1	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9004- PO1	Pass	Pass	Stable	Pass	Pass	Unstable (1)	Pass	Pass	Stable	Pass	Pass	Stable	
FLT9008- PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	


	Table 6-2 continued											
	19WP			21LL			21SP			28SP		
Fault ID	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable	Volt Violation	Volt Recovery	Stable
FLT9009- PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9010- PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9015- PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1001- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1002- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1003- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1004- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1005- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1006- SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable

(1) FLT9004-PO1 causes GEN-2016-032 instability and tripping. GEN-2016-032 was curtailed to 190MW in the 21LL model to mitigate the instability.

The results of the dynamic stability analysis showed that with a prior outage on the Crescent to Cottonwood 138 kV line followed by a three-phase fault on and loss of the Twin Lake to Dover 138 kV line (FLT9004-PO1) GEN-2016-032 became unstable and eventually tripped.


FLT9004-PO1 is categorized as a NERC TPL-001-4 Planning Event P6, which allows for curtailment of firm transmission as a system adjustment as a corrective action following the loss of the first facility. GEN-2016-032 may have to be curtailed to about 190 MW after the prior outage of the Crescent to Cottonwood 138 kV or Twin Lake to Dover 138 kV, to remain stable following a subsequent fault. Figure 6-1 shows the GEN-2016-032 instability during FLT9004-PO1 in the 21LL modification case. The stable generator response after being curtailed to 190 MW is shown in Figure 6-2.



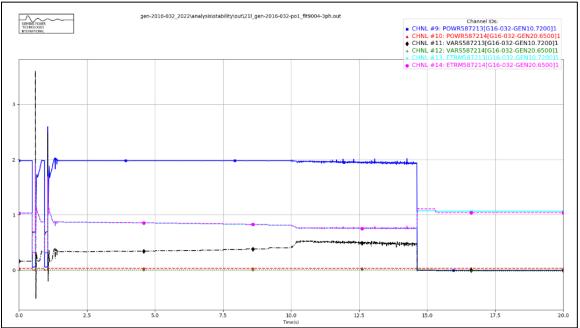





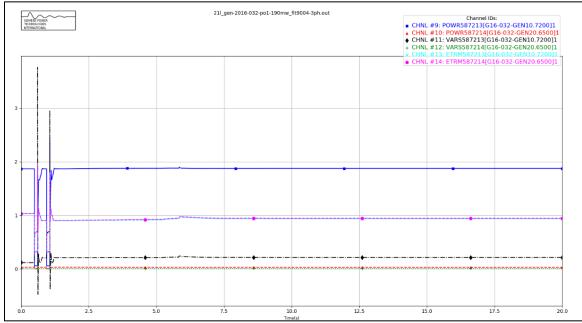

There were no other damping or voltage recovery violations attributed to the GEN-2016-032 project observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.



7.0 Modified Capacity Exceeds GIA Capacity

Under FERC Order 845, Interconnection Customers are allowed to request Interconnection Service that is lower than the full generating capacity of their planned generating facilities. The Interconnection Customers must install acceptable control and protection devices that prevent the injection above their requested Interconnection Service amount measured at the POI.

As such, Interconnection Customers are allowed to increase the generating capacity of a generating facility without increasing its Interconnection Service amount which is stated in its GIA. This is allowable as long as they install the proper control and protection devices, and the requested modification is not determined to be a Material Modification.

7.1 Results

The modified generating capacity of GEN-2016-032 (201.45 MW) exceeds the GIA Interconnection Service amount, (200 MW), as listed in Appendix A of the GIA.

The customer must install monitoring and control equipment as needed to ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA.



8.0 Material Modification Determination

In accordance with Attachment V of SPP's Open Access Transmission Tariff, for modifications other than those specifically permitted by Attachment V, SPP shall evaluate the proposed modifications prior to making them and inform the Interconnection Customer in writing of whether the modifications would constitute a Material Modification. Material Modification shall mean (1) modification to an Interconnection Request in the queue that has a material adverse impact on the cost or timing of any other Interconnection Request with a later Queue priority date; or (2) planned modification to an Existing Generating Facility that is undergoing evaluation for a Generating Facility Modification or Generating Facility Replacement, and has a material adverse impact on the Transmission System with respect to: i) steady-state thermal or voltage limits, ii) dynamic system stability and response, or iii) short-circuit capability limit; compared to the impacts of the Existing Generating Facility prior to the modification or replacement.

8.1 Results

SPP determined the requested modification is not a Material Modification based on the results of this Modification Request Impact Study performed by Aneden. Aneden evaluated the impact of the requested modification on the prior study results. Aneden determined that the requested modification did not negatively impact the prior study dynamic stability and short circuit results, and the modifications to the project were not significant enough to change the previously studied power flow conclusions.

This determination implies that any network upgrades already required by GEN-2016-032 would not be negatively impacted and that no new upgrades are required due to the requested modification, thus not resulting in a material adverse impact on the cost or timing of any other Interconnection Request with a later Queue priority date.



9.0 Conclusions

The Interconnection Customer for GEN-2016-032 requested a Modification Request Impact Study to assess the impact of the turbine and facility change to 33 x Vestas V162 6.0 MW + 1 x Vestas V136 3.45 MW for a total capacity of 201.45 MW. The combined generating capacity of GEN-2016-032 (201.45 MW) exceeds its Generator Interconnection Agreement (GIA) Interconnection Service amount, 200 MW, as listed in Appendix A of the GIA. As a result, the customer must ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA.

In addition, the modification request included changes to the collection system, generator step-up transformers, generation interconnection line, and main substation transformers.

SPP determined that power flow should not be performed based on the POI MW injection increase of 1.77% compared to the DISIS-2017-001 power flow models. However, SPP determined that while the modification used the same turbine manufacturer, Vestas, the change in stability model from VWCO81 to EV211460000 and CP200660000 required short circuit and dynamic stability analyses.

All analyses were performed using the PTI PSS/E version 33 software and the results are summarized below.

The results of the charging current compensation analysis performed using the 2019 Winter Peak, 2021 Light Load, 2021 Summer Peak, and 2028 Summer Peak models showed that the GEN-2016-032 project needed 6.3 MVAr of reactor shunts on the 34.5 kV bus of the project substation with the modifications in place, a decrease from the 18.6 MVAr found for the GEN-2016-032 configuration in the previous modification study⁶. This is necessary to offset the capacitive effect on the transmission network caused by the project's transmission line and collector system during low-wind or no-wind conditions. The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Owner and/or Transmission Operator.

The results from the short circuit analysis with the updated topology showed that the maximum GEN-2016-032 contribution to three-phase fault currents in the immediate transmission systems at or near the GEN-2016-032 POI was not greater than 1.01 kA for the 21SP and 28SP models. All three-phase fault current levels within 5 buses of the POI with the GEN-2016-032 generators online were below 45 kA for the 21SP and 28SP models. There were several buses with a maximum fault current of over 40 kA. These buses are highlighted in Appendix B.

The dynamic stability analysis was performed using the four modified study models, 2019 Winter Peak, 2021 Light Load, 2021 Summer Peak, and 2028 Summer Peak. 37 events were simulated, which included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground stuck breaker faults.

⁶ GEN-2016-032 Modification Request Impact Study, November 9, 2019



The results of the dynamic stability analysis showed that with a prior outage on the Crescent to Cottonwood 138 kV line followed by a three-phase fault on and loss of the Twin Lake to Dover 138 kV line (FLT9004-PO1) GEN-2016-032 became unstable and eventually tripped. GEN-2016-032 may have to be curtailed to about 190 MW after the prior outage of the Crescent to Cottonwood 138 kV or Twin Lake to Dover 138 kV, to remain stable following a subsequent fault.

There were no other damping or voltage recovery violations attributed to the GEN-2016-032 project observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

The requested modification has been determined by SPP to not be a Material Modification. The requested modification does not have a material adverse impact on the cost or timing of any other Interconnection Request with a later Queue priority date. As the requested modification places the generating capacity of the Interconnection Request at a higher amount than its Interconnection Service, the customer must install monitoring and control equipment as needed to ensure that the amount of power injected at the POI does not exceed the Interconnection Service amount listed in its GIA.

In accordance with FERC Order No. 827, the generating facility will be required to provide dynamic reactive power within the range of 0.95 leading to 0.95 lagging at the high-side of the generator substation.

It is likely that the customer may be required to reduce its generation output to 0 MW in real-time, also known as curtailment, under certain system conditions to allow system operators to maintain the reliability of the transmission network.

Nothing in this study should be construed as a guarantee of transmission service or delivery rights. If the customer wishes to obtain deliverability to final customers, a separate request for transmission service must be requested on Southwest Power Pool's OASIS by the customer.

