

Submitted to Southwest Power Pool



Report On

GEN-2020-SR2 Surplus Service Impact Study

Revision R1

Date of Submittal June 30, 2021

anedenconsulting.com

TABLE OF CONTENTS

Rev	ision	History	R-1
Exe	cutive	Summary	ES-1
1.0		ope of Study	
	1.1	Charging Current Compensation Analysis	
	1.2	Short Circuit Analysis	1
	1.3	Stability Analysis	1
	1.4	Power Flow	1
	1.5	Necessary Interconnection Facilities & Network Upgrades	2
	1.6	Study Limitations	2
2.0	Su	rplus Interconnection Service Request	3
	2.1	POI Injection Comparison	
3.0	Ch	arging Current Compensation Analysis	6
	3.1	Methodology and Criteria	6
	3.2	Results	6
4.0	Sh	ort Circuit Analysis	8
	4.1	Methodology	8
	4.2	Results	8
5.0	Dy	namic Stability Analysis	10
	5.1	Methodology and Criteria	
	5.2	Fault Definitions	10
	5.3	Dispatch Test Results	15
	5.4	Scenario 1 Results	17
	5.5	Scenario 2 Results	18
6.0	Ne	cessary Interconnection Facilities and Network Upgrades	20
	6.1	Interconnection Facilities	20
	6.2	Network Upgrades	20
7.0	Su	rplus Interconnection Service Determination and Requirements	21
	7.1	Surplus Service Determination	
	7.2	Surplus Service Requirements	21
8.0	Co	onclusions	22

LIST OF TABLES

Table ES-1: EGF & SGF Configuration F	ES-1
Table ES-2: GEN-2020-SR2 Interconnection Configuration F	ES-2
Table 2-1: EGF & SGF Configuration	3
Table 2-2: GEN-2020-SR2 Interconnection Configuration	4
Table 2-3: POI Injection Comparison	5
Table 3-1: Shunt Reactor Size for Reduced Generation Study	6
Table 4-1: POI Short Circuit Comparison Results	8
Table 4-2: 2018SP Short Circuit Comparison Results	8
Table 4-3: 2026SP Short Circuit Comparison Results	9
Table 5-1: Fault Definitions	11
Table 5-2: Scenario 2 Dispatch Tests	
Table 5-3: GEN-2020-SR2 Scenario 1 (EGF Offline, SGF 100%)	17
Table 5-4: GEN-2020-SR2 Scenario 2 (EGF = 90 MW, SGF = 10 MW)	18
LIST OF FIGURES	
Figure 2-1: GEN-2016-030 Single Line Diagram (EGF Existing Configuration)	4
Figure 2-2: GEN-2016-030 & GEN-2020-SR2 Single Line Diagram (Proposed EGF & SGF	
Configuration)	4
Figure 3-1: GEN-2020-SR2 Single Line Diagram (EGF & SGF Shunt Reactor)	7
Figure 5-1: Dispatch Test Voltage Recovery	
Figure 5-2: Dispatch Test Rotor Angle Deviation	16

APPENDICES

APPENDIX A: GEN-2020-SR2 Generator Dynamic Model

APPENDIX B: Short Circuit Results

APPENDIX C: SPP Disturbance Performance Requirements

APPENDIX D: Dynamic Stability Simulation Plots

Revision History

DATE OR VERSION NUMBER	AUTHOR	CHANGE DESCRIPTION
06/30/2021	Aneden Consulting	Initial Report Issued.

Executive Summary

Aneden Consulting (Aneden) was retained by the Southwest Power Pool (SPP) to perform a Surplus Interconnection Service Impact Study (Study) for GEN-2020-SR2 to utilize the Surplus Interconnection Service provided by GEN-2016-030 at its existing point of interconnection (POI), the Brown 138 kV substation in the Oklahoma Gas and Electric (OKGE) control area.

GEN-2020-SR2, the proposed Surplus Generating Facility (SGF), will be located at the existing main collection substation used by GEN-2016-030, the Existing Generating Facility (EGF).

The EGF project has an effective Generator Interconnection Agreement (GIA) with a POI capacity of 100 MW and is making 100 MW of Surplus Interconnection Service available at its point of interconnection. Per the SPP Open Access Transmission Tariff (OATT) the amount of Surplus Interconnection Service available to be used by the SGF is limited by the amount of Interconnection Service granted to the EGF at the same POI. In addition, the Surplus Interconnection Service is only available up to the amount that can be accommodated without requiring additional Network Upgrades.

The GEN-2020-SR2 proposed configuration consists of 32 x Power Electronics FP3510M2 3.267 MW batteries for total capacity of 104.54 MW as shown in Table ES-1 below along with the EGF details. As the requested Surplus Interconnection Service is for 100 MW, the injection amount of GEN-2020-SR2 must be limited to 100 MW at the POI. The combined generation from both the SGF and the EGF may not exceed 100 MW at the POI, which is the total Interconnection Service amount currently granted to the EGF. GEN-2020-SR2 includes the use of a Power Plant Controller (PPC) to limit the power injection as required.

The GEN-2020-SR2 configuration is captured in Table ES-2 below.

Table ES-1: EGF & SGF Configuration

ramor = 0 or = 0 or					
Request	Capacity (MW)	Surplus Generator Configuration	Point of Interconnection		
GEN-2020-SR2 (SGF)	100	32 x Power Electronics FP3510M2 3.267 MW = 104.54 MW PPC to limit POI to 100MW	Brown 138 kV (515157)		
GEN-2016-030 (EGF)	100	200 x AE 500NX 0.5 MW = 100 MW	Brown 138 kV (515157)		

Table ES-2: GEN-2020-SR2 Interconnection Configuration

Facility	GEN-2020-SR2
Point of Interconnection	Brown 138 kV (515157)
Configuration/Capacity	32 x Power Electronics FP3510M2 3.267 MW = 104.54 MW PPC to limit POI to 100MW
	Length = 5 miles
Existing Generation Interconnection Line	R = 0.003360 pu
(shared with EGF and unchanged)	X = 0.019120 pu
unonangoay	B = 0.034340 pu
Existing Main Substation Transformer ¹ (shared with EGF and unchanged)	X = 8.997%, R = 0.225%, Winding MVA = 75 MVA, Rating MVA = 125 MVA
Equivalent GSU Transformer ¹	X = 8.465%, R = 0.769%, Winding MVA = 116.16 MVA, Rating MVA ² = 116.2 MVA
	R = 0.002215 pu
Equivalent Collector Line ³	X = 0.002827 pu
	B = 0.017128 pu

¹⁾ X/R based on Winding MVA, 2) Rating rounded up in PSS/E, 3) all pu are on 100 MVA Base

Since the EGF and SGF are both non-synchronous fuel types, SPP determined that power flow analysis is not required because the EGF was studied previously under the required reliability conditions.

The scope of this study included a charging current compensation analysis, a short circuit analysis, and a dynamic stability analysis.

Aneden performed the analyses using the study data provided by the SGF based on the DISIS-2016-002 Group 14 study models:

- 1. 2017 Winter Peak (2017WP),
- 2. 2018 Summer Peak (2018SP), and
- 3. 2026 Summer Peak (2026SP).

All analyses were performed using the PTI PSS/E version 33.7 software and the results are summarized below.

The results of the charging current compensation analysis performed using the 2017 Winter Peak, 2018 Summer Peak, and 2026 Summer Peak models showed that the GEN-2020-SR2 SGF project needed an approximately 5.16 MVAr shunt reactor at the project substation, to reduce the POI MVAr to zero with the EGF offline and disconnected. This is a decrease from the 5.3 MVAr found for the EGF alone in the DISIS study¹. This is necessary to offset the capacitive effect on the

¹ Definitive Interconnection System Impact Study Report DISIS-2016-001-1, December 22, 2017

transmission network caused by the project's transmission line and collector system during reduced generation conditions. The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Operator. The applicable reactive power requirements will be further reviewed by the Transmission Owner and/or Transmission Operator.

The results from the short circuit analysis compared the existing DISIS case (EGF online, SGF not included) 2018SP and 2026SP models to the SGF study case (EGF and SGF online) 2018SP and 2026SP models. The maximum contribution to three-phase fault currents in the immediate systems due to the addition of the SGF was not greater than 0.48 kA. All three-phase fault current levels within 5 buses of the POI with the EGF and SGF generators online were below 16 kA for the 2018SP models and 2026SP models.

The dynamic stability analysis was performed using the three DISIS-2016-002 models 2017 Winter Peak, 2018 Summer Peak, 2026 Summer Peak with two dispatch scenarios. In the first scenario, the SGF was online at 100 MW while the EGF was offline with the collection system disconnected. Aneden and SPP selected the second scenario based on a combination of SGF and EGF dispatch scenarios with the project dispatches varied by 10 MW increments of the total capacity of 100 MW. The resulting selected worst-case scenario include a combination of the SGF dispatched to 10 MW and the EGF to 90 MW. Up to 44 events were simulated, which included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground faults with stuck breakers faults.

The results of the dynamic stability analysis showed that there were no damping or voltage recovery violations observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

The results of the study showed that the Surplus Interconnection Service Request by GEN-2020-SR2 did not negatively impact the reliability of the Transmission System. There were no additional Interconnection Facilities or Network Upgrades identified by the analyses and the Transmission Owner did not identify any Interconnection Facilities required for the Surplus Interconnection Request at the time of posting. A Surplus Interconnection Service Facility Study will not be required per the Transmission Owner.

SPP has determined that GEN-2020-SR2 may utilize the requested 100 MW of Surplus Interconnection Service provided by GEN-2016-030. The combined generation from both the SGF and the EGF may not exceed 100 MW at the POI, which is the total Interconnection Service amount currently granted to the EGF.

The customer must install monitoring and control equipment as needed to ensure that the SGF does not exceed the granted surplus amount and to ensure that combination of the SGF and EGF power injected at the POI does not exceed the Interconnection Service amount listed in the EGF's GIA. The monitoring and control scheme will need to be reviewed by SPP and the TO and documented in Appendix C of the GIA.

In accordance with FERC Order No. 827, both the SGF and EGF will be required to provide dynamic reactive power within the range of 0.95 leading to 0.95 lagging at the high-side of the generator substation.

It is likely that the customer may be required to reduce its generation output to 0 MW in real-time, also known as curtailment, under certain system conditions to allow system operators to maintain the reliability of the transmission network.

Nothing in this study should be construed as a guarantee of transmission service or delivery rights. If the customer wishes to obtain deliverability to final customers, a separate request for transmission service must be requested on Southwest Power Pool's OASIS by the customer.

1.0 Scope of Study

Aneden Consulting (Aneden) was retained by the Southwest Power Pool (SPP) to perform a Surplus Service Impact Study (Study) for GEN-2020-SR2, the Surplus Generating Facility (SGF). A Surplus Service Impact Study is performed to identify the impact of the Surplus Interconnection Service on the transmission system reliability and any additional Interconnection Facilities necessary pursuant to the SPP Generator Interconnection Procedures ("GIP") contained in Attachment V Section 3.3 of the SPP Open Access Transmission Tariff (OATT). The amount of Surplus Interconnection Service available to be used by the Surplus Generating Facility (SGF) is limited by the amount of Interconnection Service granted to the existing interconnection customer for the Existing Generating Facility (EGF) at the same POI. The Surplus Interconnection Service is only available up to the amount that can be accommodated without requiring additional Network Upgrades. The required scope of the study is dependent upon the EGF and SGF specifications. The criteria sections below include the basis of the analyses included in the scope of study.

All analyses were performed using the PTI PSS/E version 33.7 software. The results of each analysis are presented in the following sections.

1.1 Charging Current Compensation Analysis

SPP requires that a charging current compensation analysis be performed on the requested configuration as it is a non-synchronous resource. The charging current compensation analysis determines the added capacitive effect at the POI caused by the project's collection system and transmission line's capacitance. A shunt reactor size is determined for the SGF to offset the capacitive effect and maintain zero (0) MVAr injection at the POI while the plant's generators and capacitors are offline.

1.2 Short Circuit Analysis

SPP requires that a short circuit analysis be performed to determine the maximum available fault current requiring interruption by protective equipment with both the SGF and EGF online, along with the amount of increase in maximum fault current due to the addition of the SGF. The analysis is performed on two scenarios, the existing cases with EGF as dispatched and SGF offline, and the modified cases with both EGF and SGF dispatched.

1.3 Stability Analysis

SPP requires that a dynamic stability analysis be performed to determine whether the SGF, EGF, and the transmission system will remain stable and within applicable criteria. Dynamic stability analysis is performed on two dispatch scenarios, the first where the EGF is offline and the SGF is dispatched to 100%, and the second which is determined to be the worst-case scenario based on a dispatch test described in Section 5.3. Any mitigations, if required to address any stability issues, will be classified according to type of need, Interconnection Facility, Network Upgrade or Contingent Facility.

1.4 Power Flow

The power flow (thermal/voltage) analyses may be performed as necessary to ensure that all required reliability conditions are studied. If the EGF was not studied under off-peak conditions, off-peak steady state analyses shall be performed to the required level necessary to demonstrate

reliable operation of the Surplus Interconnection Service. If the original system impact study is not available for the Interconnection Service, both off-peak and peak analysis may need to be performed for the EGF associated with the request.

An SGF that includes a fuel type (synchronous/non-synchronous) different from the EGF will require a power flow analysis to study impacts resultant from changes in dispatch to all equal and lower queued requests. Any mitigations, if required to address any thermal or voltage violations, will be evaluated to determine if they are Interconnection Facility, Network Upgrade or Contingent Facility needs.

Since the EGF and SGF are both non-synchronous fuel types, SPP determined that power flow analysis is not required because the EGF was studied previously under the required reliability conditions.

1.5 Necessary Interconnection Facilities & Network Upgrades

The SPP OATT² states that the reactive power, short circuit/fault duty, stability, and steady-state analyses (where applicable) for the Surplus Interconnection Service will identify any additional Interconnection Facilities necessary. In addition, the analyses will determine if any Network Upgrades are required for mitigation. The Surplus Interconnection Service is only available up to the amount that can be accommodated without requiring additional Network Upgrades.

1.6 Study Limitations

The assessments and conclusions provided in this report are based on assumptions and information provided to Aneden by others. While the assumptions and information provided may be appropriate for the purposes of this report, Aneden does not guarantee that those conditions assumed will occur. In addition, Aneden did not independently verify the accuracy or completeness of the information provided. As such, the conclusions and results presented in this report may vary depending on the extent to which actual future conditions differ from the assumptions made or information used herein.

² SPP Open Access Transmission Tariff Section 3.34.1

2.0 Surplus Interconnection Service Request

The GEN-2020-SR2 Interconnection Customer has requested a Surplus Interconnection Service Impact Study (Study) for GEN-2020-SR2 to utilize the Surplus Interconnection Service provided by GEN-2016-030 at its existing point of interconnection (POI), the Brown 138 kV substation in the Oklahoma Gas and Electric (OKGE) control area.

GEN-2020-SR2, the proposed SGF, will be located at the existing main collection substation used by GEN-2016-030, the EGF.

The EGF project has an effective GIA with a POI capacity of 100 MW and is making 100 MW of Surplus Interconnection Service available at its point of interconnection. Per the SPP OATT the amount of Surplus Interconnection Service available to be used by the SGF is limited by the amount of Interconnection Service granted to the EGF at the same POI. In addition, the Surplus Interconnection Service is only available up to the amount that can be accommodated without requiring additional Network Upgrades.

At the time of the posting of this report, GEN-2016-030 (EGF) is an active interconnection request at the same POI (Brown 138 kV) with a queue status of "IA FULLY EXECUTED/ON SCHEDULE". GEN-2016-030 is a solar farm, has a maximum summer and winter queue capacity of 100 MW, and has Energy Resource Interconnection Service (ERIS) and Network Resource Interconnection Service (NRIS).

GEN-2016-030, the EGF, was originally studied as part of Group 14 in the DISIS-2016-001-1 study. Figure 2-1 shows the power flow model single line diagram for the EGF configuration.

The GEN-2020-SR2 proposed configuration consists of 32 x Power Electronics FP3510M2 3.267 MW batteries for total capacity of 104.54 MW as shown in Table 2-1 below along with the EGF details. As the requested Surplus Interconnection Service is for 100 MW, the injection amount of GEN-2020-SR2 must be limited to 100 MW at the POI. The combined generation from both the SGF and the EGF may not exceed 100 MW at the POI, which is the total Interconnection Service amount currently granted to the EGF. GEN-2020-SR2 includes the use of a Power Plant Controller (PPC) to limit the power injection as required. The proposed GEN-2020-SR2 configuration is captured in Figure 2-2 and Table 2-2 below.

Table 2-1: EGF & SGF Configuration

Request	Capacity (MW)	Surplus Generator Configuration	Point of Interconnection
GEN-2020-SR2 (SGF)	100		Brown 138 kV (515157)
GEN-2016-030 (EGF)	100	200 x AE 500NX 0.5 MW = 100 MW	Brown 138 kV (515157)

EGF (GEN-2016-030) 515157 BROWN 4 587200 GEN-2016-030 587201 G16-030-XFMR 587202 G16-030-GSU1 587203 G16-030-GEN1 97.96 -97.96 98.25 -98.25 99.30 99.90 3.70 -97.64 0.00 12.68 -2.86 -3.61 2.42R -14.36 14.36 2.86 1.01 139.46 1.01 139.55 1.00 34.64 1.01 34.99 1.02 0.49

Figure 2-1: GEN-2016-030 Single Line Diagram (EGF Existing Configuration)



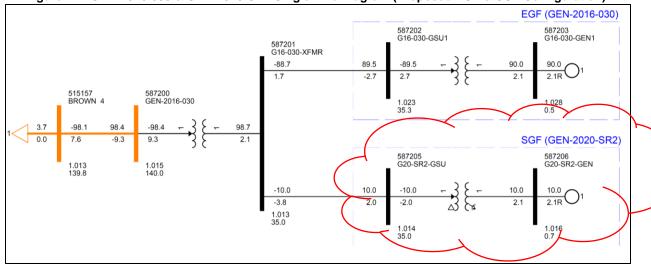


Table 2-2: GEN-2020-SR2 Interconnection Configuration

Facility	GEN-2020-SR2
Point of Interconnection	Brown 138 kV (515157)
Configuration/Capacity	32 x Power Electronics FP3510M2 3.267 MW = 104.54 MW PPC to limit POI to 100MW
Existing Generation Interconnection Line (shared with EGF and unchanged)	Length = 5 miles R = 0.003360 pu X = 0.019120 pu B = 0.034340 pu
Existing Main Substation Transformer ¹ (shared with EGF and unchanged)	X = 8.997%, R = 0.225%, Winding MVA = 75 MVA, Rating MVA = 125 MVA
Equivalent GSU Transformer ¹	X = 8.465%, R = 0.769%, Winding MVA = 116.16 MVA, Rating MVA = 116.2 MVA
Equivalent Collector Line ³	R = 0.002215 pu X = 0.002827 pu B = 0.017128 pu

¹⁾ X/R based on Winding MVA, 2) Rating rounded up in PSS/E, 3) all pu are on 100 MVA Base

2.1 POI Injection Comparison

The real power injection at the POI was measured in PSS/E for the EGF configuration and the SGF configuration separately with the other facility offline and disconnected. The difference in the POI injection was then compared for information.

There was an insignificant change (increase of 0.81%) in the real power output at the POI between the EGF configuration and SGF configuration as shown in Table 2-3.

Table 2-3: POI Injection Comparison

Interconnection Request	EGF POI Injection from Project (MW)	SGF POI Injection from Project (MW)	POI Injection Difference %
GEN-2020-SR2	97.76	98.55	0.81%

3.0 Charging Current Compensation Analysis

The charging current compensation analysis was performed for GEN-2020-SR2 to determine the capacitive charging effects required due to the SGF during reduced generation conditions (unsuitable wind speeds, unsuitable solar irradiance, insufficient state of charge, idle conditions, curtailment, etc.) at the generation site and to size shunt reactors that would reduce the project reactive power contribution to the POI to approximately zero.

3.1 Methodology and Criteria

A scenario with the SGF online and the EGF offline and disconnected was used for this study. The SGF generator was switched out of service while other collector system elements remained in-service. A shunt reactor was tested at the project's collection substation 34.5 kV bus to set the MVAr flow into the POI to approximately zero. The size of the shunt reactor is equivalent to the charging current value at unity voltage and the compensation provided is proportional to the voltage effects on the charging current (i.e., for voltages above unity, reactive compensation is greater than the size of the reactor).

3.2 Results

The results from the analysis showed that the GEN-2020-SR2 (SGF) project needed an approximately 5.16 MVAr shunt reactor at the project substation, to reduce the POI MVAr to zero when the EGF is offline and disconnected. This is a decrease from the 5.3 MVAr found for the EGF alone in the DISIS study³. Figure 3-1 illustrates the shunt reactor sizes needed to reduce the POI MVAr to approximately zero for the SGF. The final shunt reactor requirements are shown in Table 3-1.

The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Operator. The applicable reactive power requirements will be further reviewed by the Transmission Owner and/or Transmission Operator.

Table 3-1: Shunt Reactor Size for Reduced Generation Study

Machine	POI Bus	POI Bus Name	Reactor Size (MVAr)		
Macilile	Number	FOI bus Name	17WP	18SP	26SP
GEN-2020-SR2 (SGF)	515157	Brown 138 kV	5.16	5.16	5.16
GEN-2016-030 (EGF)	515157	Brown 138 kV	5.3*	5.3*	5.3*

*Determined in the DISIS-2016-001-1 Report

³ Definitive Interconnection System Impact Study Report DISIS-2016-001-1, December 22, 2017

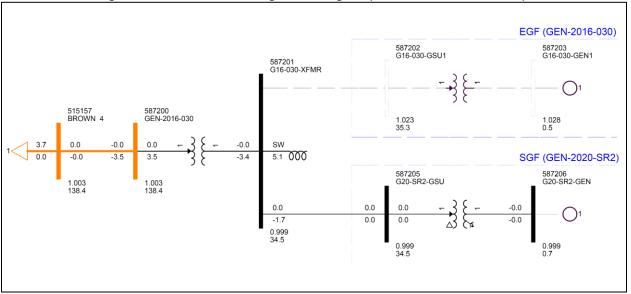


Figure 3-1: GEN-2020-SR2 Single Line Diagram (EGF & SGF Shunt Reactor)

4.0 Short Circuit Analysis

A short circuit study was performed using the 2018SP and 2026SP models to determine the maximum available fault current requiring interruption by protective equipment with both the SGF and EGF for each bus in the relevant subsystem, and the amount of increase in maximum fault current due to the addition of the SGF. The detailed results of the short circuit analysis are provided in Appendix B.

4.1 Methodology

The short circuit analysis included applying a 3-phase fault on buses up to 5 levels away from the 138 kV POI bus. The PSS/E "Automatic Sequence Fault Calculation (ASCC)" fault analysis module was used to calculate the fault current levels with and without the SGF online. The existing DISIS cases were studied with the EGF as dispatched before the SGF was connected. The second stability scenario was also studied with both the EGF and SGF connected and dispatched as determined for the stability study (shown in Section 5.3) to determine the impact of the SGF and the transmission modifications included in this study.

4.2 Results

The results of the short circuit analysis compare the existing DISIS case (EGF online, SGF not included) 2018SP and 2026SP models to the selected dispatch case (EGF = 90 MW, SGF = 10 MW) 2018SP and 2026SP models in Table 4-1 through Table 4-3. The POI bus fault current magnitudes are provided in Table 4-1 showing a maximum fault current of 8.81 kA with the EGF and SGF online. The addition of the SGF configuration increased the POI bus fault current by 0.46 kA.

The maximum fault current calculated within 5 buses of the POI was less than 16 kA for the 2018SP and 2026SP models respectively. The maximum contribution to three-phase fault currents due to the addition of the SGF was about 7.9% and 0.48 kA.

Table 4-1: POI Short Circuit Comparison Results

Case	DISIS EGF Current (kA)	SGF & EGF Current (kA)	Max kA Change	Max %Change
2018SP	8.35	8.81	0.46	5.5%
2026SP	8.33	8.79	0.46	5.5%

Table 4-2: 2018SP Short Circuit Comparison Results

Voltage (kV)	Max. Current (EGF & SGF) (kA)	Max kA Change	Max %Change
69	6.0	0.01	0.2%
138	15.5	0.48	7.9%
345	10.0	0.04	0.4%
Max	15.5	0.48	7.9%

Table 4-3: 2026SP Short Circuit Comparison Results

Voltage (kV)	Max. Current (EGF & SGF) (kA)	Max kA Change	Max %Change
69	6.0	0.01	0.2%
138	15.5	0.48	7.9%
345	10.0	0.04	0.4%
Max	15.5	0.48	7.9%

5.0 Dynamic Stability Analysis

Aneden performed a dynamic stability analysis to identify the impact of the GEN-2020-SR2 SGF project. The analysis was performed according to SPP's Disturbance Performance Requirements shown in Appendix C. The project details are described in Section 2.0 above and the dynamic modeling data is provided in Appendix A. The simulation plots can be found in Appendix D.

5.1 Methodology and Criteria

The dynamic stability analysis was performed using models developed with the requested 32 x Power Electronics FP3510M2 3.267 MW GEN-2020-SR2 SGF generating facility configuration included in the cases. The requested modification included the use of a PPC (REPCAU1) to limit the power injection as required. This stability analysis was performed using PTI's PSS/E version 33.7 software.

Two stability model scenarios were developed using the models from DISIS-2016-002 for Group 14. The first scenario (Scenario 1) was comprised of the SGF online and dispatched to maximum capacity while the EGF generator was offline and the EGF collection system disconnected. The second scenario included both the SGF and EGF online and dispatched. In order to select the appropriate EGF/SGF dispatch combination for the second scenario (Scenario 2), dispatch models in 10 MW increments of the total capacity were created and simulated with a POI fault as shown in Table 5-2 and detailed in Section 5.3. The nearby synchronous machine angle deviation and POI bus voltage deviation results were used to select one dispatch combination where both the EGF and SGF were online for this impact study.

The modified dynamics model data for the GEN-2020-SR2 SGF is provided in Appendix A. The modified power flow models and associated dynamics database were initialized (no-fault test) to confirm that there were no errors in the initial conditions of the system and the dynamic data.

During the fault simulations, the active power (PELEC), reactive power (QELEC), and terminal voltage (ETERM) were monitored for the EGF and SGF and other equally and prior queued projects in Group 14. In addition, voltages of five (5) buses away from the POI of GEN-2020-SR2 were monitored and plotted. The machine rotor angle for synchronous machines and speed for asynchronous machines within this study area including 520 (AEPW), 524 (OKGE), 525 (WFEC), 526 (SPS), 531 (MIDW), 534 (SUNC), 536 (WERE) were monitored. In addition, the voltages of all 100 kV and above buses within the study area were monitored.

5.2 Fault Definitions

Aneden simulated the faults previously simulated for the GEN-2016-030 (EGF) and selected additional fault events for this study as required. The new set of faults were simulated using the modified study models from both scenarios. The fault events included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground faults with stuck breakers. The simulated faults are listed and described in Table 5-1 below. These contingencies were applied to the modified 2017 Winter Peak, 2018 Summer Peak, and the 2026 Summer Peak models.

Table 5-1: Fault Definitions

Fault ID	Planning Event	Fault Descriptions
T duit ID	ugu	3 phase fault on JOHNCO 4 138 kV (514808) to RUSSET-4 138 kV (515120) line CRT 1,
		near JOHNCO 4.
		a. Apply fault at the JOHNCO 4 138 kV bus.
FLT07-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on BROWN 4 138 kV (515157) to COLEMNT4 138 kV (515153) line CRT 1,
		near BROWN 4.
FLT38-3PH	P1	a. Apply fault at the BROWN 4 138 kV bus.
1 2130 31 11		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on BROWN 4 138 kV (515157) to S BROWN4 138 kV (505602) line CRT 1,
		near BROWN 4. a. Apply fault at the BROWN 4 138 kV bus.
FLT39-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on COLEMNT4 138 kV (515153) to BROWNTP4 138 kV (515152) line CRT 1,
		near COLEMNT4.
FLT40-3PH	P1	a. Apply fault at the COLEMNT4 138 kV bus.
FL140-3FH	FI	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1,
		near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus.
FLT41-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1,
		near S BROWN4.
FLT42-3PH	D4	a. Apply fault at the S BROWN4 138 kV bus.
FL142-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to TUPELO 4 138 kV (505600) line CRT 1,
		near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus.
FLT43-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to KRSYJCTS4 138 kV (521109) line CRT 1,
		near S BROWN4.
FLT44-3PH	P1	a. Apply fault at the S BROWN4 138 kV bus.
FL144-3FII	FI	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to KRSYJCTN4 138 kV (521108) line CRT 1,
		near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus.
FLT45-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on S BROWN4 138 kV (505602) to BROWN 4 138kV (515157) line CRT 1,
		near S BROWN4.
FLT52-3PH	D4	a. Apply fault at the S BROWN4 bus.
	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on BROWNTP4 138 kV (515152) to COLEMNT4 138 kV (515153) line CRT 1,
		near BROWNTP4.
FLT55-3PH	P1	a. Apply fault at the BROWNTP4 bus.
		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		Leave fault of for 5 cycles, then tilp the line in (b) and remove fault.

Table 5-1 continued

		Table 5-1 continued
Fault ID	Planning Event	Fault Descriptions
FLT52-PO1	P6	Prior Outage of S BROWN4 (505602) to COLBRTP4 (515159) line; 3 phase fault on S BROWN4 138 kV (505602) to BROWN 4 138kV (515157) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT52-PO2	P6	Prior Outage of S BROWN4 (505602) to KRSYJCTN4 (521108) line; 3 phase fault on S BROWN4 138 kV (505602) to BROWN 4 138kV (515157) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT41-PO3	P6	Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT55-PO4	P6	Prior Outage of BROWNTP4 (515152) to BODLE 4 (515155) line; 3 phase fault on BROWNTP4 138 kV (515152) to COLEMNT4 138 kV (515153) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT55-PO5	P6	Prior Outage of BROWNTP4 (515152) to LTLCITY4 (515151) line; 3 phase fault on BROWNTP4 138 kV (515152) to COLEMNT4 138 kV (515153) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT9001-3PH	P1	3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT9002-3PH	P1	3 phase fault on S BROWN4 138 kV (505602) to DENISON4 138 kV (505604) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator GEN #1 1 (505606). TRIP Generator GEN #2 1 (505608). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT9003-3PH	P1	3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT9004-3PH	P1	3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.

Table 5-1 continued

Fault ID	Planning Event	Table 5-1 continued Fault Descriptions
- I adit ID	Tranning Event	3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1,
El Topos obli		near COLBRTP4.
	_	a. Apply fault at the COLBRTP4 bus.
FLT9005-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1,
		near COLBRTP4.
FLT9006-3PH	P1	a. Apply fault at the COLBRTP4 bus.
1 213000 3111		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on RUSSETT4 138 kV (521044) to RUSSET-4 138 kV (515120) line CRT 1,
		near RUSSETT4.
FLT9007-3PH	P1	a. Apply fault at the RUSSETT4 bus.
		b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on KRSYJCTS4 138 kV (521109) to KIERSEY4 138 kV (520963) line CRT 1,
		near KRSYJCTS4.
		a. Apply fault at the KRSYJCTS4 bus.
FLT9008-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on KRSYJCTN4 138 kV (521108) to SCOLEMN4 138 kV (521049) line CRT 1,
		near KRSYJCTN4.
FLT9009-3PH	P1	a. Apply fault at the KRSYJCTN4 138 kV bus.
FL19009-3FH		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on TUPELO 4 138 kV (505600) to ALLEN 4 138 kV (505598) line CRT 1, near
		TUPELO 4.
FLT9010-3PH	P1	a. Apply fault at the TUPELO 4 138 kV bus.
		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		· · · · · · · · · · · · · · · · · · ·
	P1	3 phase fault on TUPELO 4 138 kV (505600) to ATKWEST 4 138 kV (521188) line CRT 1, near TUPELO 4.
		a. Apply fault at the TUPELO 4 138 kV bus.
FLT9011-3PH		b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on TUPELO 4 138 kV (505600) to TUPELO4 138 kV (520406) line CRT 1,
		near TUPELO 4.
ELTO(40 april	P1	a. Apply fault at the TUPELO 4 138 kV bus.
FLT9012-3PH	1	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on TUPELO 4 138 kV (505600) to ALLENGT4 138 kV (510881) line CRT 1,
FLT9013-3PH		near TUPELO 4.
	P1	a. Apply fault at the TUPELO 4 138 kV bus.
	FI	b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
		3 phase fault on TUPELO 4 138 kV (505600) to TUPLOTP4 138 kV (521071) line CRT 1,
	P1	near TUPELO 4.
FLT9014-3PH		a. Apply fault at the TUPELO 4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line.
		c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
		d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
	I	a. Loave laak on for a cycles, then the the line in (b) and femove ladic.

Table 5-1 continued

FLT9015-3PH PLT9015-3PH PLT901	EICID	Discoulant Franci	Table 5-1 continued
FLT9015-3PH P1 1. In ear TUPELO 4. a. Apply fault at the TUPELO 4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator A15-006-GEN1 (868333). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. FLT9016-3PH P1 FLT9016-3PH P1 P1 FLT9016-3PH P1 FLT9016-	Fault ID	Planning Event	Fault Descriptions
a. Apply fault at the TUPELO 4 138 kV bus. b. Clear fault after 50 cycles and trip the faulted line. TRIP Generator A15-006-GEN1 (585333). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 10F 5 cycles, then trip the line in (b) and remove fault. 3 phase fault on 10F 5 cycles, then trip the line in (b) and remove fault. c. Apply fault at the TUPELO 4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator ASCINITE CHEMPS. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault an CCLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on BROWNTP4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 10 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 10 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 10 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 10 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 1			3 phase fault on TUPELO 4 138 kV (505600) to ASGI2815-006 138 kV (585330) line CRT
FLT9015-3PH P1 D. Ciear fault after 5 cycles and trip the faulted line. TRIP Generator Aft-50-6-GEN1 (858333).	FLT9015-3PH		1, near TUPELO 4.
TRIP Generator A15-006-CENI (58533). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. 3 phase fault on TUPELO 4 138 kV (56500) to ASGI1612 138 kV (588277) line CRT 1, near TUPELO 4. a. Apply fault at the TUPELO 4 138 kV (58600) to ASGI1612 138 kV (588277). P1 b. Clear fault after 5 cycles and tips the faulted line. TRIP Generator ASGI1612-CEN (588279). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (51517) to S BROWN4 (505602) line; 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and tips the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 1015 cycles, then trip the line in (b) back into the fault. d. Leave fault on 105 cycles, then trip the line in (b) back into the fault. d. Leave fault on 105 cycles, then trip the line in (b) back into the fault. prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 136 kV (515151) line CRT 1, near 5 cycles and tips the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 107 5 cycles and tips the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 107 5 cycles, then trip the line in (b) back into the fault. d. Leave fa			a. Apply fault at the TUPELO 4 138 kV bus.
c. Wall 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. 3 phase fault on TUPELO 4 138 kV (50560) to ASGI1612 138 kV (588277) line CRT 1, near TUPELO 4 138 kV (505600) to ASGI1612 138 kV (588277) line CRT 1, near TUPELO 4 138 kV (505600) to ASGI1612 138 kV (588277) line CRT 1, near TUPELO 4 138 kV (5058279). c. Value 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWA (515157) to S BROWAM (505602) line; 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (51514) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. b. Clear fault after 5 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWA (515157) to S BROWM4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near SROWNTP4. FLT9003-PO3 P6 b. Clear fault after 6 cycles and trip the faulted line. c. Walt 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWM4 (505602) line; 3 phase fault on BROWNTP4 bus. b. Clear fault after 6 cycles and trip the faulted line. c. Walt 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip to S BROWM4 (505602) line; 3 phase fault on BROWNTP4 bus. b. Clear fault after 6 cycles and trip the faulted line. c. Walt 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fau		P1	b. Clear fault after 5 cycles and trip the faulted line.
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. 3 phase fault on TUPELO 4. a. Apply fault at the TUPELO 4 138 kV (505600) to ASGI1612 138 kV (588277) line CRT 1, near TUPELO 4. a. Apply fault at the TUPELO 4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator ASGI1612-CEN (588279). c. Walt 20 cycles, sond then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Walt 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITV4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) had remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles, shen trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5			TRIP Generator A15-006-GEN1 (585333).
FLT9016-3PH P1 B1 B2 B3 B3 B4 B4 B4 B4 B4 B4 B4 B4			c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
PLT9016-3PH P1 Determinent TupELO 4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator ASCIG1612-CEN (588279). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near GROWNTP4. A Apply fault at the BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near GROWNTP4. A Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip t			d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
A. Apply fault at the TUPELO 4 138 kV bus.			3 phase fault on TUPELO 4 138 kV (505600) to ASGI1612 138 kV (588277) line CRT 1,
FLT9016-3PH P1 b. Clear fault after 5 cycles and trip the faulted line. TRIP Generator ASQI1612-GEN (588279). c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line: 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWNA (305602) line; 3 phase fault on BROWNTP4 138 kV (615152) to LTLCTTV4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWNA (505602) line; 3 phase fault to BROWNTP4 Jas kV (515152) to BODLE4 138 kV (515155) line CRT 1, near CRUBRTP4. a. Apply fault at the BROWN 4 (515157) to S BROWNA (505602) line; 3 phase fault to COLBRTP4 bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the flaulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then t			near TUPELO 4.
TRIP Generator ASG11612-GEN (588279). C. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to 5 BROWN4 (505602) line; 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to 5 BROWNA (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. A Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to 5 BROWNA (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BDOLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles and trip the laulted line. c. Wait 20 c			a. Apply fault at the TUPELO 4 138 kV bus.
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCTY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BDOLE4 138 kV (515155) line CRT 1, near BROWNTP4. ELT9004-PO3 P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) bine CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back	FLT9016-3PH	P1	b. Clear fault after 5 cycles and trip the faulted line.
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (50515154) line CRT 1, near COLEMNT4. FLT9001-PO3 P6			TRIP Generator ASGI1612-GEN (588279).
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (50515154) line CRT 1, near COLEMNT4. FLT9001-PO3 P6			c. Wait 20 cycles, and then re-close the line in (b) back into the fault.
Sphase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. Prior COLEMNT4. EARTH			
Sphase fault on COLEMNT4 138 kV (515153) to EXPLRPL4 138 kV (515154) line CRT 1, near COLEMNT4. Prior COLEMNT4. EARTH			
PLT9001-PO3 P6 a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. ELT9003-PO3 P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. ELT9004-PO3 P6 BROWN 4 (516157) to S BROWN4 (505602) line; 3 phase fault on Collemna for the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. ELT9005-PO3 P6 BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN4 (515157) to COLEMNT4 (515153) li			
FLT9001-PO3 P6 a. Apply fault at the COLEMNT4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on ColeRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on ColeRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on ColeRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault to ColeRTP4 las kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLERTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of			
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. ELT9004-PO3 P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 c	FLT9001-PO3	P6	
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on for 5 cycles, then trip the line in (b) and remove fault. C. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV 605602) to COLB			
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on S BROWN4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near S BROWN4. d. Leave fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4.			
Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to LTLCITY4 138 kV (515151) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault to for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles such then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault afte			
FLT9003-PO3 P6 a Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to SBROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. A Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to SBROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. e. Wait 20 cycles, and then re-close the line in (b) back into the fault. prior Outage of BROWN 4 (515157) to SBROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. e. Cwait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault to for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN4 (318 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the			
PET			
FLT9003-PO3 P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWNH (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on COLBRTP4 138 kV (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for			
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. FLT9006-PO3 P6 a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycl	EL T0003-DO3	D6	
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWNA (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLERTP4 138 kV (515159) line CRT 1, near S BROWN4. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. d. Leave fault on 5 BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on 5 BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on 5 BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fau	1 1 3003-1 03	10	
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to \$ BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4, a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to \$ BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to \$ BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 5 BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLEMT4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLEMT4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLEMT4 138 kV (515159) line CRT 1, near S BROWN4. b. Clear fault after 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 13			
Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault o			
Sphase fault on BROWNTP4 138 kV (515152) to BODLE4 138 kV (515155) line CRT 1, near BROWNTP4. a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to SBROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to SBROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on SBROWN 4 (505602) to COLBRTP4 138 kV (515159) line CRT 1, near SBROWN 4. a			
P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLBMT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. ELEAVE FOR P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault faire 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on 5 cycles, then trip the line in (b) back into the fault. e. Wait 20 cycles, and then re-close the line in (b) back into the fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on 5 cycles, then trip the line in (b) back into the fault. e. Char fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. e. Char fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			2 phose foult on DDO/MITDA 420 b) (6.4542) to DDI TA 420 b) (6.45455) line CDT 4
FLT9004-PO3 P6 a. Apply fault at the BROWNTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. FLT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. ener S BROWNA. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5			
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	EL T0004 D00	DC	
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FL19004-PO3	P6	
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. ELT41-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. ELT42-PO6 P6 Apply fault at the S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) back into the fault. d. Leave fault on S BROWN4 138 kV bus. b. Clear fault after 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
FLT9005-PO3 P6 Apply fault at the COLBRTP4 138 kV (515159) to BODLE4 138 kV (515155) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to 5 BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles, then trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the line in (b) back into the fault. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
PELT9005-PO3 P6 RET9005-PO3 P6 RET9005-PO3 P6 RET9005-PO3 P6 RET9005-PO3 P6 RET9006-PO3 RET9006-			
FLT9005-PO3 P6 a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	EL TOOOF BOO	50	
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FL19005-PO3	P6	
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
Prior Outage of BROWN 4 (515157) to S BROWN4 (505602) line; 3 phase fault on COLBRTP4 138 kV (515159) to BUTRFLD4 138 kV (515176) line CRT 1, near COLBRTP4. a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
FLT9006-PO3 P6			
P6 RET9006-PO3 RET9006-PO3 P6 RET9006-PO3 RET9006-PO3 P6 RET9006-PO3	1		
FLT9006-PO3 P6 a. Apply fault at the COLBRTP4 bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1		
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FI T0000 500	Bo.	
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FL19006-PO3	P6	
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1		
3 phase fault on S BROWN4 138 kV (505602) to RUSSETT4 138 kV (521044) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	ļ		
FLT41-PO6 P6 near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1		
FLT41-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. FLT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1		
b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FLT41-PO6		
c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. FLT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.		P6	
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault. Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. ELT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. FLT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
3 phase fault on S BROWN4 138 kV (505602) to COLBRTP4 138 kV (515159) line CRT 1, near S BROWN4. FLT42-PO6 P6 A. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
rear S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.			
FLT42-PO6 P6 a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault.		P6	
b. Clear fault after 5 cycles and trip the faulted line.c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	1		
c. Wait 20 cycles, and then re-close the line in (b) back into the fault.	FLT42-PO6		
d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.	1		
			d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.

Table 5-1 continued

Fault ID	Planning Event	Fault Descriptions
FLT43-PO6	P6	Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to TUPELO 4 138 kV (505600) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT44-PO6	P6	Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to KRSYJCTS4 138 kV (521109) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT45-PO6	P6	Prior Outage of BROWN 4 (515157) to COLEMNT4 (515153) line; 3 phase fault on S BROWN4 138 kV (505602) to KRSYJCTN4 138 kV (521108) line CRT 1, near S BROWN4. a. Apply fault at the S BROWN4 138 kV bus. b. Clear fault after 5 cycles and trip the faulted line. c. Wait 20 cycles, and then re-close the line in (b) back into the fault. d. Leave fault on for 5 cycles, then trip the line in (b) and remove fault.
FLT1001-SB	P4	Stuck Breaker at S BROWN4 (505602) a. Apply single phase fault at S BROWN4 bus. b. Clear fault after 16 cycles and trip the following elements c. Trip the bus S BROWN4 (505602).
FLT1002-SB	P4	Stuck Breaker at COLEMNT4 (515153) a. Apply single phase fault at S COLEMNT4 bus. b. Clear fault after 16 cycles and trip the following elements c. Trip the bus COLEMNT4 (515153).

5.3 Dispatch Test Results

In order to determine the appropriate EGF/SGF dispatch combination for the second scenario, dispatch models in 10 MW increments of the total capacity were created and simulated with a POI fault. The dispatch scenarios tested are shown in Table 5-2. The nearby synchronous machine angle deviation and POI bus voltage deviation results were used to select the worst-case dispatch combination with both the EGF and SGF online for this impact study.

Table 5-2: Scenario 2 Dispatch Tests

Dispatch Scenarios								
GEN-2016- 030 EGF (MW)	GEN-2020- SR2 SGF (MW)	EGF + SGF (MW)						
10	90	100						
20	80	100						
30	70	100						
40	60	100						
50	50	100						
60	40	100						
70	30	100						
80	20	100						
90	10	100						

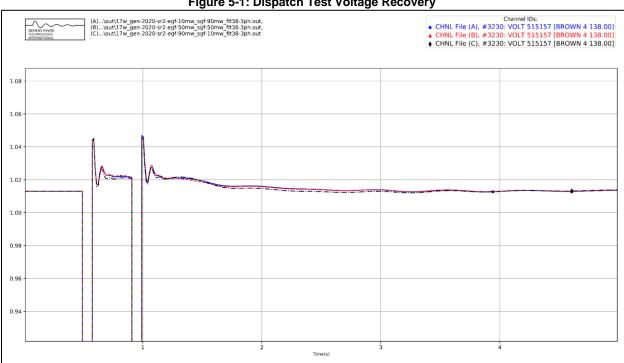


Figure 5-1: Dispatch Test Voltage Recovery



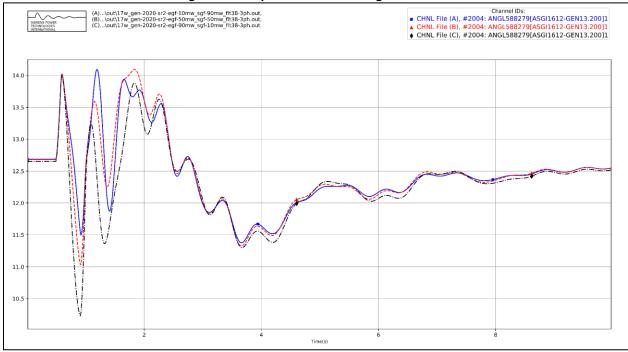


Figure 5-1 and Figure 5-2 show the nearby synchronous machine voltage recovery and rotor angle deviation respectively for three of the tested dispatch scenarios. The scenario in which the EGF is online at 90 MW and the SGF is online at 10 MW was selected as Scenario 2 based on the larger rotor angle deviation.

Southwest Power Pool **Aneden Consulting**

5.4 Scenario 1 Results

Table 5-3 shows the results of the fault events simulated for each of the three modified cases in Scenario 1. The associated stability plots are provided in Appendix D.

Table 5-3: GEN-2020-SR2 Scenario 1 (EGF Offline, SGF 100%)

	17WP			R2 Scenario 1 (EGF Offline, SGI			26SP		
Fault ID	Voltage Recovery	Voltage Violation	Stable	Voltage Recovery	Voltage Violation	Stable	Voltage Recovery	Voltage Violation	Stable
FLT07-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT38-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT39-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT40-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT41-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT42-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT43-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT44-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT45-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9001-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9002-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9003-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9004-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9005-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9006-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9007-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9008-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9009-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9010-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9011-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9012-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9013-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9014-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9015-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9016-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1001-SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1002-SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-PO1	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT41-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9001-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9003-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9004-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9005-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9006-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-PO4	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-PO5	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT41-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT42-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT43-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT44-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT45-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable

There were no damping or voltage recovery violations observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied

and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

5.5 Scenario 2 Results

Table 5-4 shows the results of the fault events simulated for each of the three modified cases in Scenario 2. The associated stability plots are provided in Appendix D.

Table 5-4: GEN-2020-SR2 Scenario 2 (EGF = 90 MW, SGF = 10 MW)

	17WP			18SP			26SP		
Fault ID	Voltage Recovery	Voltage Violation	Stable	Voltage Recovery	Voltage Violation	Stable	Voltage Recovery	Voltage Violation	Stable
FLT07-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT38-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT39-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT40-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT41-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT42-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT43-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT44-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT45-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9001-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass Pass	Stable
FLT9002-3PH FLT9003-3PH	Pass Pass	Pass Pass	Stable Stable	Pass Pass	Pass Pass	Stable Stable	Pass Pass	Pass	Stable Stable
FLT9003-3PH FLT9004-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9004-3FH FLT9005-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9005-3FH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9007-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9008-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9009-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9010-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9011-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9012-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9013-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9014-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9015-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9016-3PH	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1001-SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT1002-SB	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-PO1	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT52-PO2	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT41-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9001-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9003-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9004-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9005-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT9006-PO3	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-PO4	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT55-PO5	Pass Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass Pass	Stable
FLT41-PO6		Pass	Stable	Pass	Pass	Stable	Pass		Stable
FLT42-PO6	Pass Pass	Pass Pass	Stable Stable	Pass Pass	Pass Pass	Stable Stable	Pass Pass	Pass Pass	Stable Stable
FLT43-PO6 FLT44-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable
FLT45-PO6	Pass	Pass	Stable	Pass	Pass	Stable	Pass	Pass	Stable

There were no damping or voltage recovery violations observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

6.0 Necessary Interconnection Facilities and Network Upgrades

This study identified the impact of the Surplus Interconnection Service of the transmission system reliability and any additional Interconnection Facilities or Network Upgrades necessary. The Surplus Interconnection Service is only available up to the amount that can be accommodated without requiring additional Network Upgrades.

6.1 Interconnection Facilities

This study did not identify any additional Interconnection Facilities required by the addition of the SGF.

The Transmission Owner did not identify any Interconnection Facilities required for the Surplus Interconnection Request at the time of posting. A Surplus Interconnection Service Facility Study will not be required per the Transmission Owner.

6.2 Network Upgrades

This study did not identify any Network Upgrades required by the addition of the SGF.

The Transmission Owner did not identify any Network Upgrades required for the Surplus Interconnection Request at the time of posting. A Surplus Interconnection Service Facility Study will not be required per the Transmission Owner.

7.0 Surplus Interconnection Service Determination and Requirements

In accordance with Attachment V of SPP's Open Access Transmission Tariff, SPP shall evaluate the request for Surplus Interconnection Service and inform the Interconnection Customer in writing of whether the Surplus Interconnection Service can be utilized without negatively impacting the reliability of the Transmission System and without any additional Network Upgrades necessary.

7.1 Surplus Service Determination

SPP determined the request for Surplus Interconnection Service does not negatively impact the reliability of the Transmission System and no required Network Upgrades or Interconnection Facilities were identified by this Surplus Interconnection Service Impact Study performed by Aneden. Aneden evaluated the impact of the requested Surplus Interconnection Service on the prior study results and determined that the requested Surplus Interconnection Service resulted in similar dynamic stability and short circuit analyses and that the prior study power flow results are not negatively impacted.

SPP has determined that GEN-2020-SR2 may utilize the requested 100 MW of Surplus Interconnection Service provided by GEN-2016-030.

7.2 Surplus Service Requirements

The amount of Surplus Interconnection Service available to be used is limited by the amount of Interconnection Service granted to the existing interconnection customer at the same POI. The combined generation from both the SGF and the EGF may not exceed 100 MW at the POI, which is the total Interconnection Service amount currently granted to the EGF.

The customer must install monitoring and control equipment as needed to ensure that the SGF does not exceed the granted surplus amount and to ensure that combination of the SGF and EGF power injected at the POI does not exceed the Interconnection Service amount listed in the EGF's GIA. The monitoring and control scheme will need to be reviewed by SPP and the TO and documented in Appendix C of the GIA.

8.0 Conclusions

The GEN-2020-SR2 Interconnection Customer has requested a Surplus Interconnection Service Impact Study (Study) for GEN-2020-SR2 (SGF) to utilize the Surplus Interconnection Service provided by GEN-2016-030 (EGF) at its existing the point of interconnection (POI), the Brown 138 kV substation.

The scope of this study included a charging current compensation analysis, short circuit analysis, and dynamic stability analysis. Since the EGF and SGF are both non-synchronous fuel types, SPP determined that power flow analysis should not be performed as the EGF was studied previously under the required reliability conditions.

The results of the charging current compensation analysis performed using the 2017 Winter Peak, 2018 Summer Peak, and 2026 Summer Peak models showed that the GEN-2020-SR2 SGF project needed an approximately 5.16 MVAr shunt reactor at the project substation, to reduce the POI MVAr to zero with the EGF offline and disconnected. This is a decrease from the 5.3 MVAr found for the EGF alone in the DISIS study⁴. This is necessary to offset the capacitive effect on the transmission network caused by the project's transmission line and collector system during reduced generation conditions. The information gathered from the charging current compensation analysis is provided as information to the Interconnection Customer and Transmission Owner (TO) and/or Transmission Operator. The applicable reactive power requirements will be further reviewed by the Transmission Owner and/or Transmission Operator.

The results from the short circuit analysis compared the existing DISIS case (EGF online, SGF not included) 2018SP and 2026SP models to the selected dispatch case (EGF and SGF online) 2018SP and 2026SP models. The maximum contribution to three-phase fault currents in the immediate systems due to the addition of the SGF was not greater than 0.48 kA. All three-phase fault current levels within 5 buses of the POI with the EGF and SGF generators online were below 16 kA for the 2018SP models and 2026SP models.

The dynamic stability analysis was performed using the three DISIS-2016-002 models 2017 Winter Peak, 2018 Summer Peak, 2026 Summer Peak with two scenarios. In the first scenario, the SGF was online at 100 MW while the EGF was offline with the collection system disconnected. Aneden and SPP selected the second scenario based on a combination of SGF and EGF dispatch scenarios with the project dispatches varied by 10 MW increments of the total capacity of 100 MW. The resulting selected worst-case scenario include a combination of the SGF dispatched to 10 MW and the EGF to 90 MW. Up to 44 events were simulated, which included three-phase faults, three-phase faults on prior outage cases, and single-line-to-ground faults with stuck breakers faults.

The results of the dynamic stability analysis showed that there were no damping or voltage recovery violations observed during the simulated faults. Additionally, the project was found to stay connected during the contingencies that were studied and, therefore, will meet the Low Voltage Ride Through (LVRT) requirements of FERC Order #661A.

⁴ Definitive Interconnection System Impact Study Report DISIS-2016-001-1, December 22, 2017

The results of the study showed that the Surplus Interconnection Service Request by GEN-2020-SR2 did not negatively impact the reliability of the Transmission System. There were no additional Interconnection Facilities or Network Upgrades identified by the analyses and the Transmission Owner did not identify any Interconnection Facilities required for the Surplus Interconnection Request at the time of posting. A Surplus Interconnection Service Facility Study will not be required per the Transmission Owner.

SPP has determined that GEN-2020-SR2 may utilize the requested 100 MW of Surplus Interconnection Service provided by GEN-2016-030. The combined generation from both the SGF and the EGF may not exceed 100 MW at the POI which is the total Interconnection Service amount currently granted to the EGF.

The customer must install monitoring and control equipment as needed to ensure that the SGF does not exceed the granted surplus amount and to ensure that combination of the SGF and EGF power injected at the POI does not exceed the Interconnection Service amount listed in the EGF's GIA. The monitoring and control scheme will need to be reviewed by SPP and the TO and documented in Appendix C of the GIA.

In accordance with FERC Order No. 827, both the SGF and EGF will be required to provide dynamic reactive power within the range of 0.95 leading to 0.95 lagging at the high-side of the generator substation.

It is likely that the customer may be required to reduce its generation output to 0 MW in real-time, also known as curtailment, under certain system conditions to allow system operators to maintain the reliability of the transmission network.

Nothing in this study should be construed as a guarantee of transmission service or delivery rights. If the customer wishes to obtain deliverability to final customers, a separate request for transmission service must be requested on Southwest Power Pool's OASIS by the customer.